


8434/8435

Installation Instructions

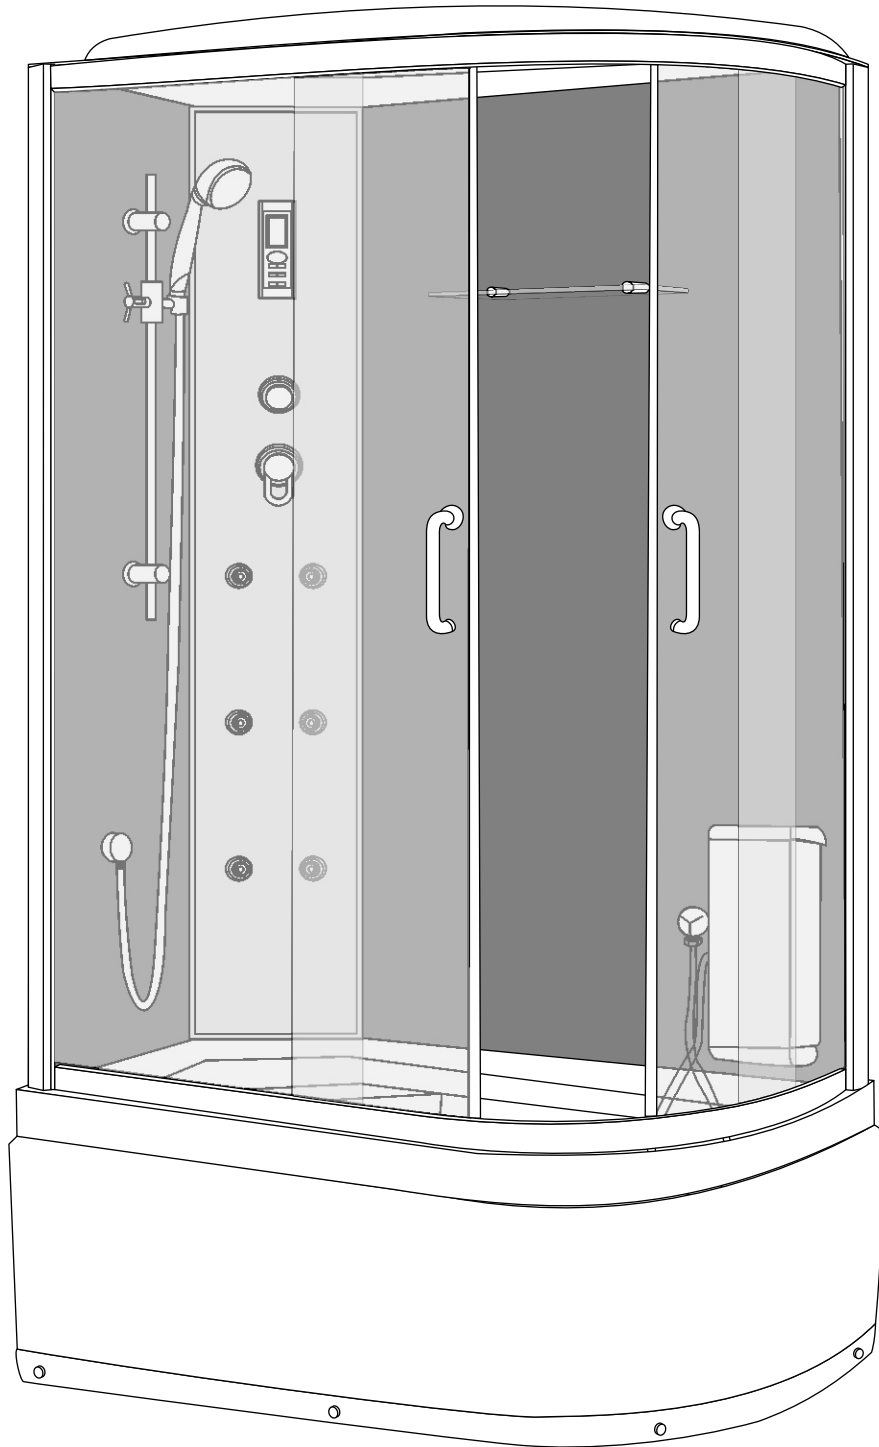

SIZE : 120*85*220 CM


8434/8435

Installation Instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.

Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.


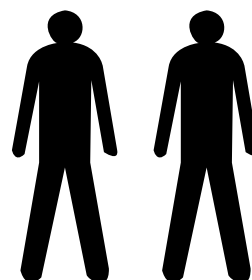


Drill beat head
5. 5mm

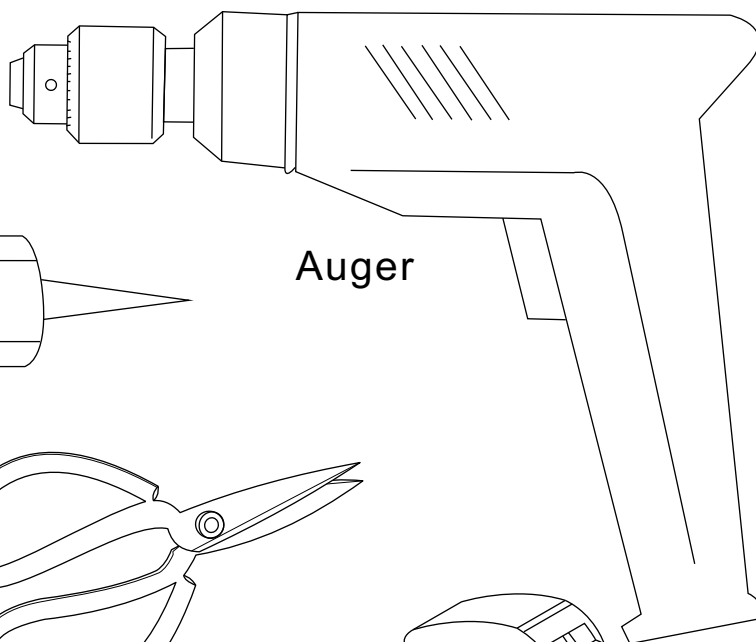


Auger


Sanitary Silicone

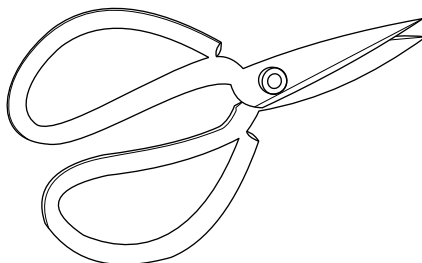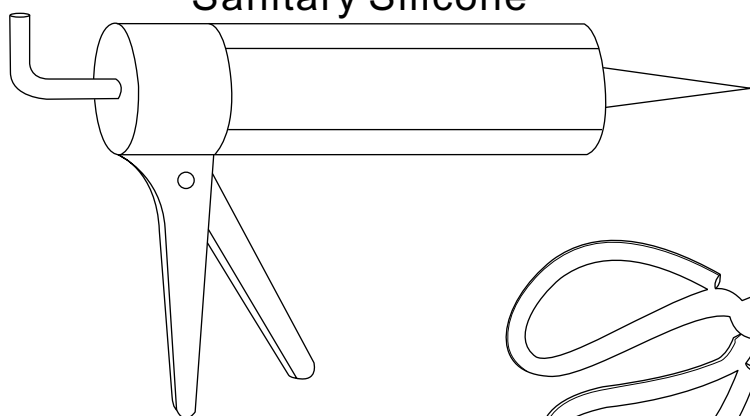


Forfex

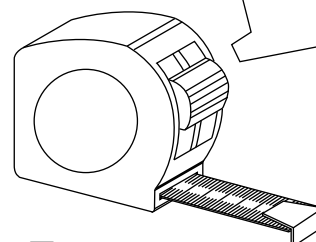


Tape measure

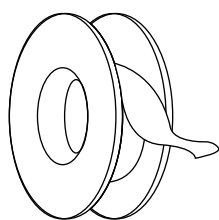


PTFE tape



Pencil







Magnetic crosshead schrewdriver

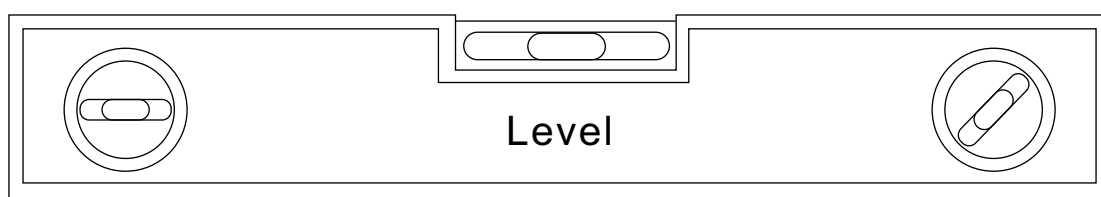

Level



8434/8435

Installation Instructions

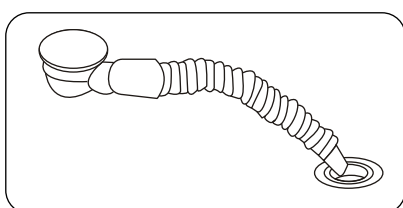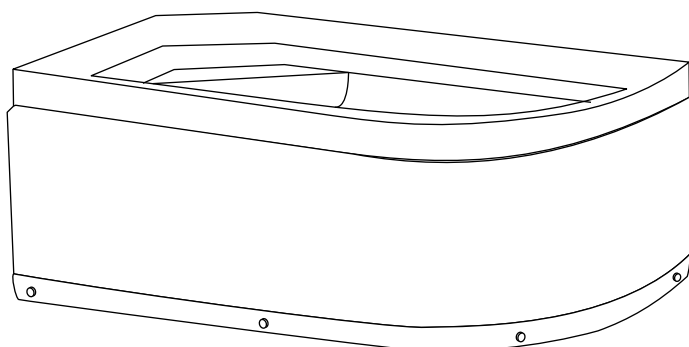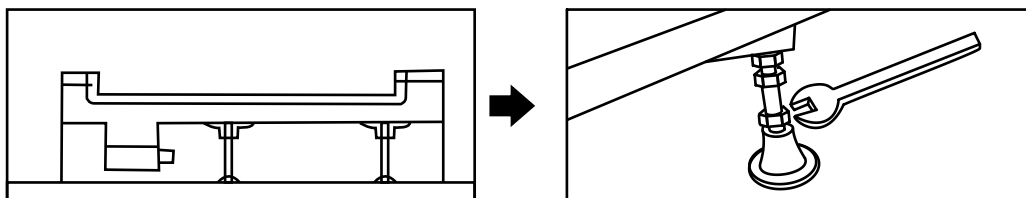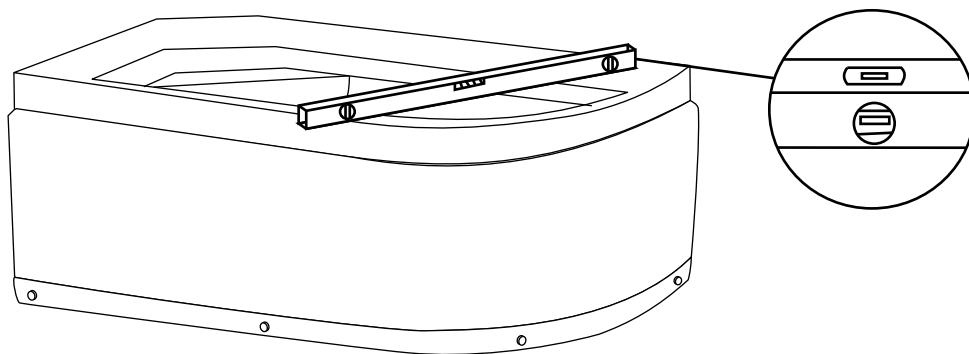



Soulevez la partie arrière du receveur, puis insérez une extrémité du tuyau dans le trou de drainage.

Technical drawing of a roof edge detail. It shows a vertical metal plate with a wavy profile, secured by bolts and a clamping device. Arrows indicate the direction of force or movement.

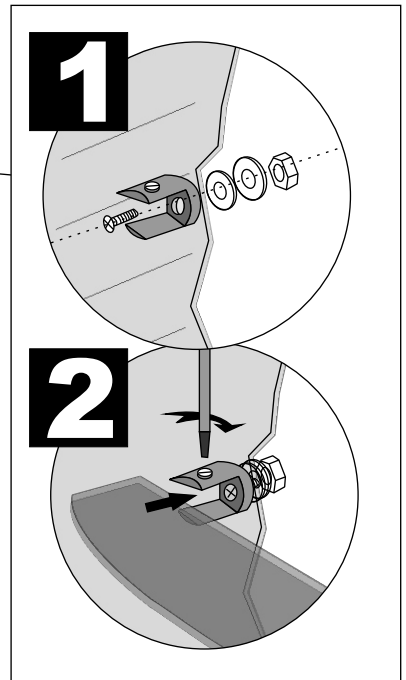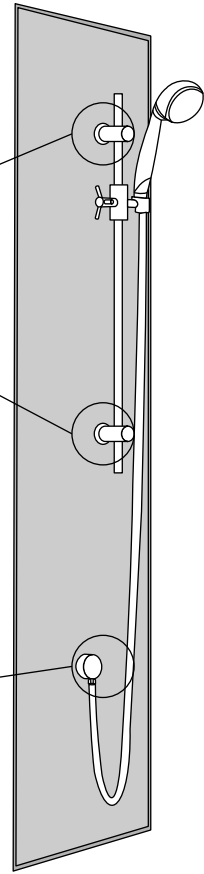




8434/8435

Installation Instructions

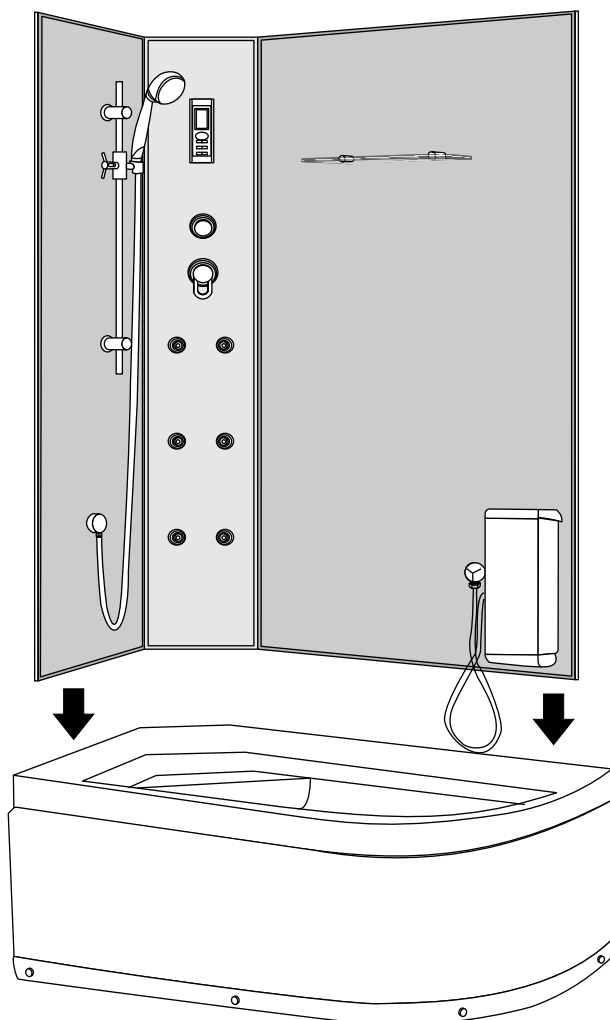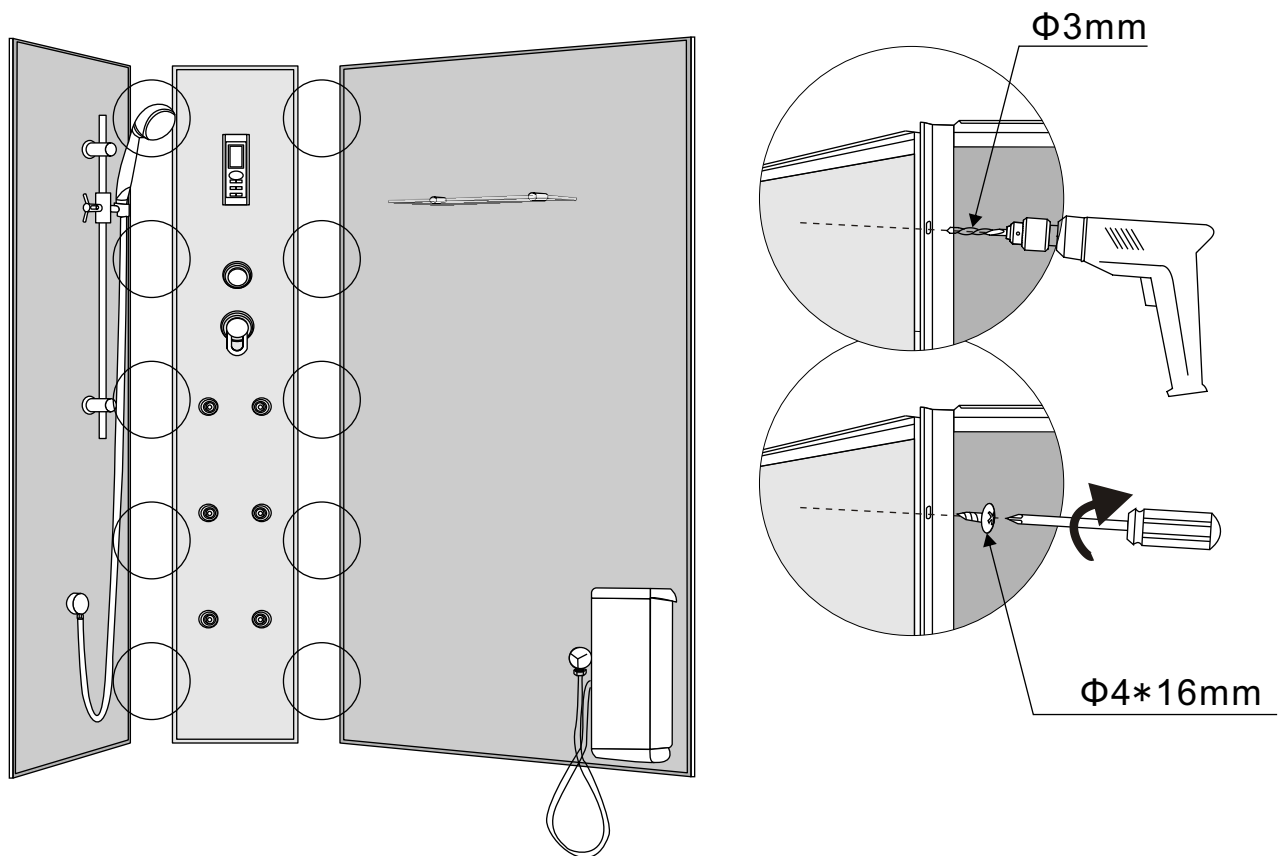



8434/8435

Installation Instructions

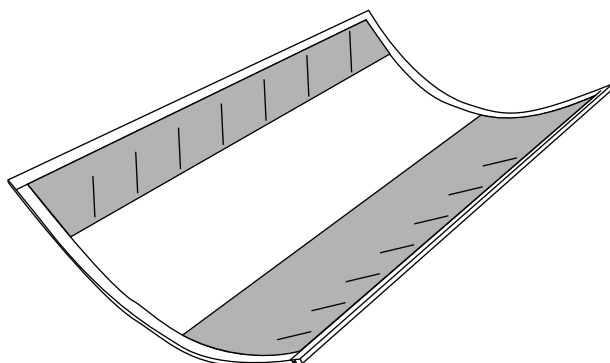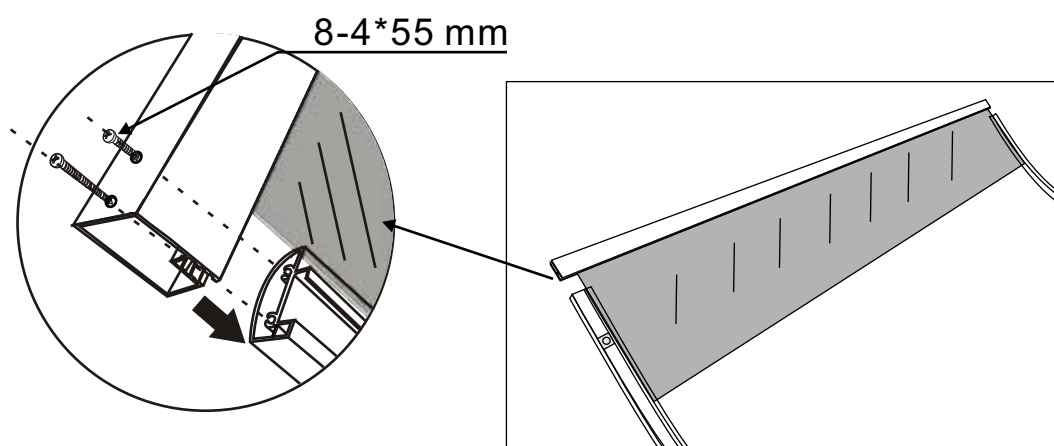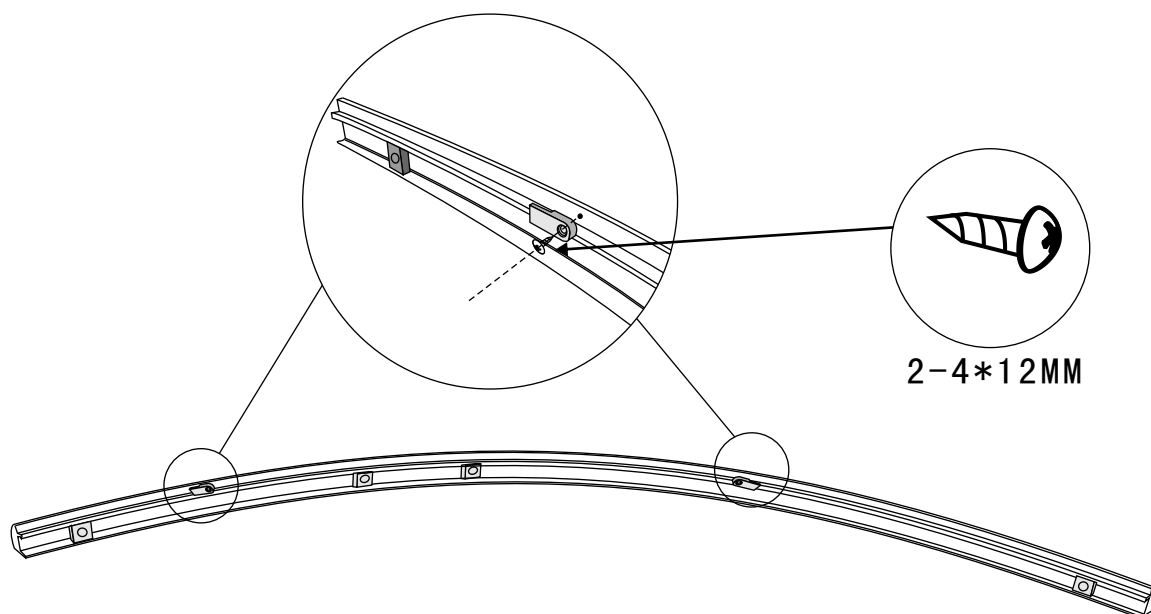



8434/8435

Installation Instructions

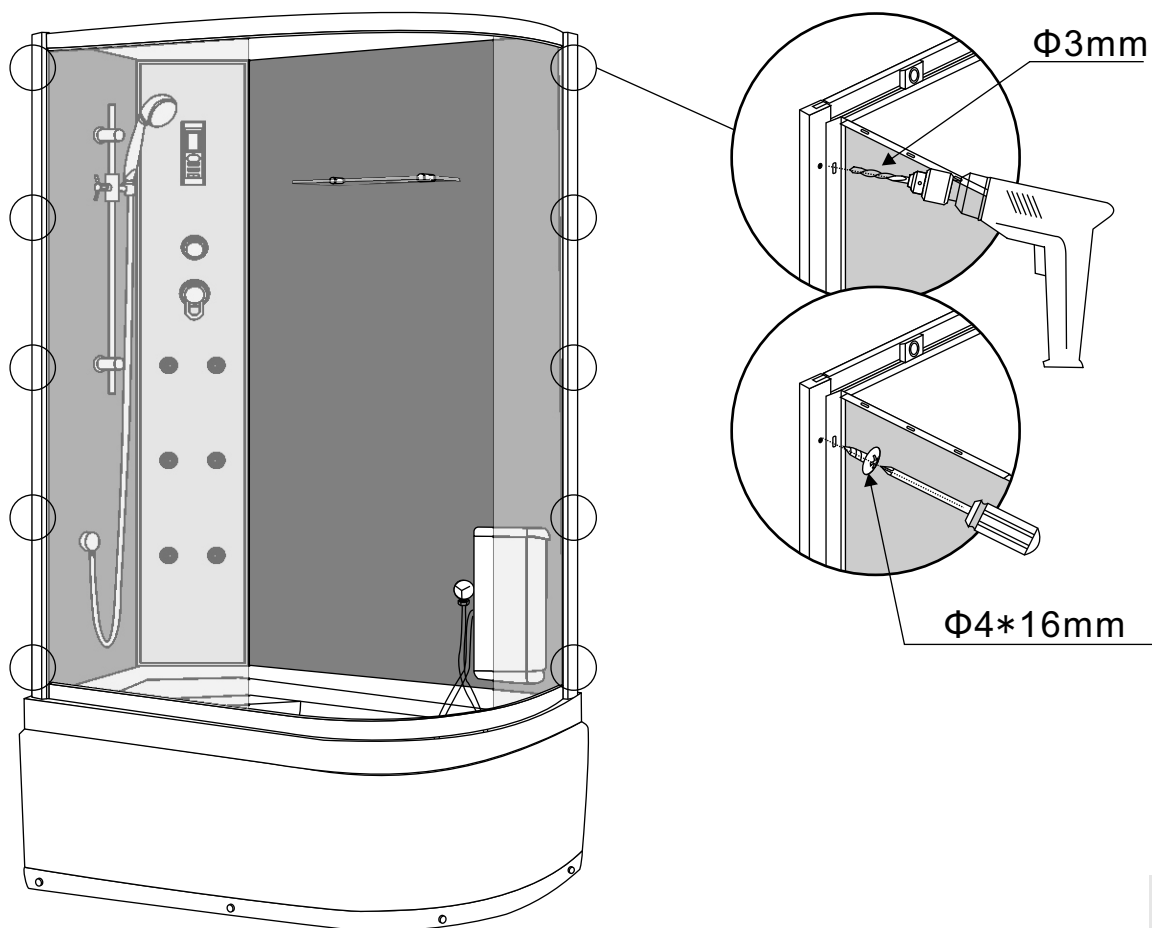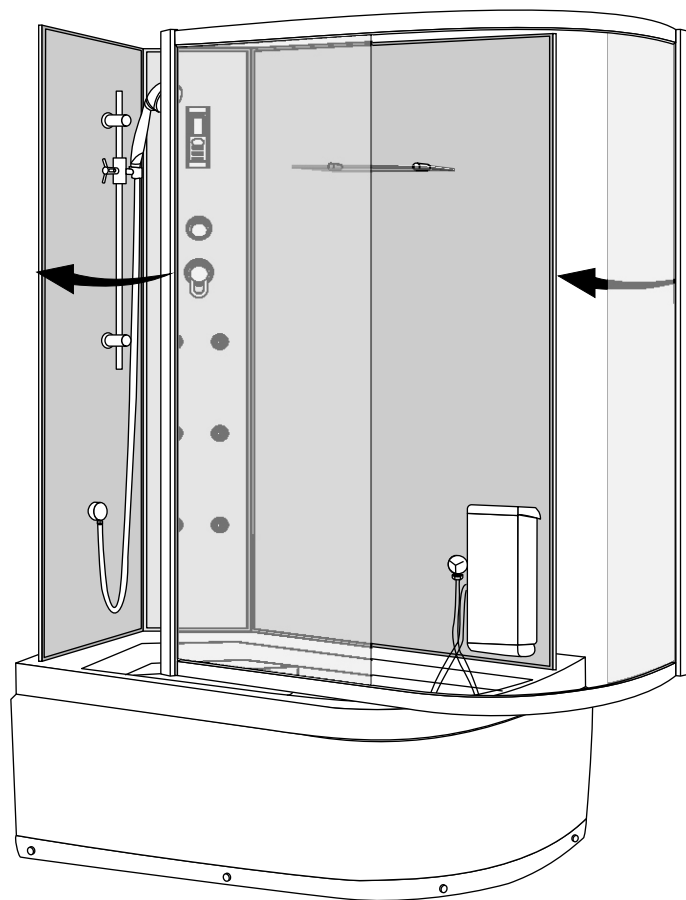




8434/8435

Installation Instructions

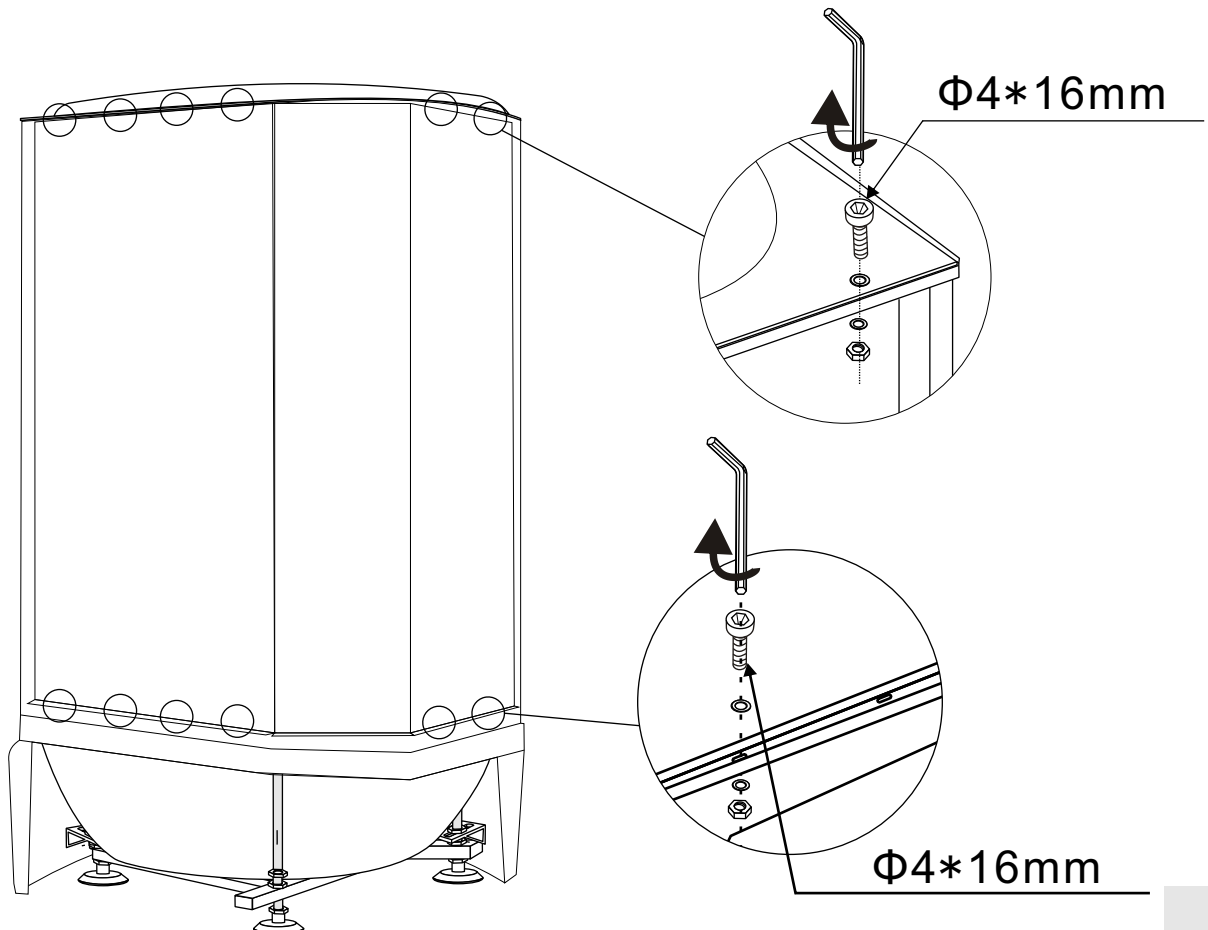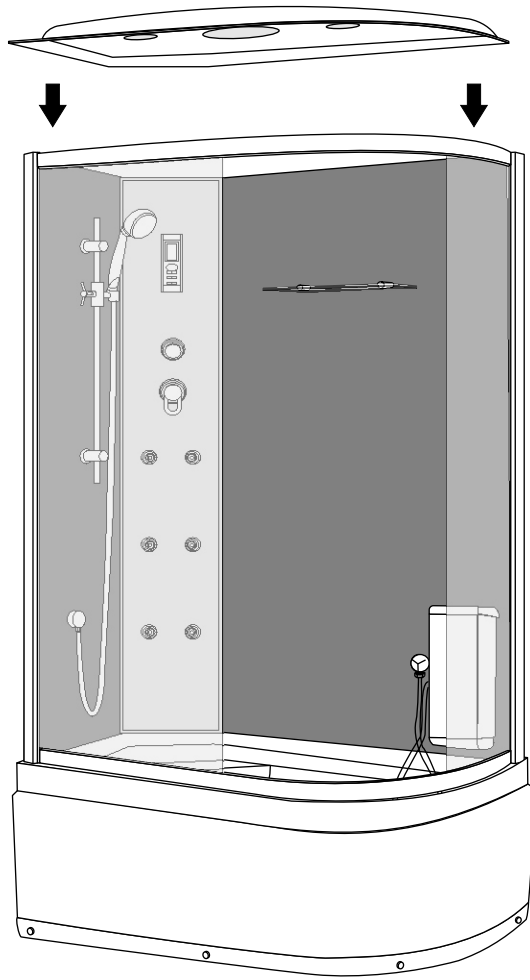





8434/8435

Installation Instructions

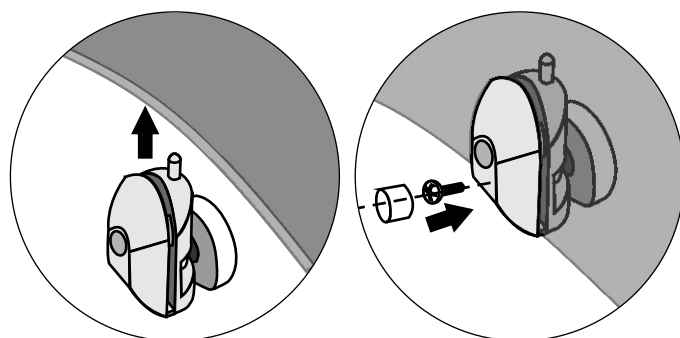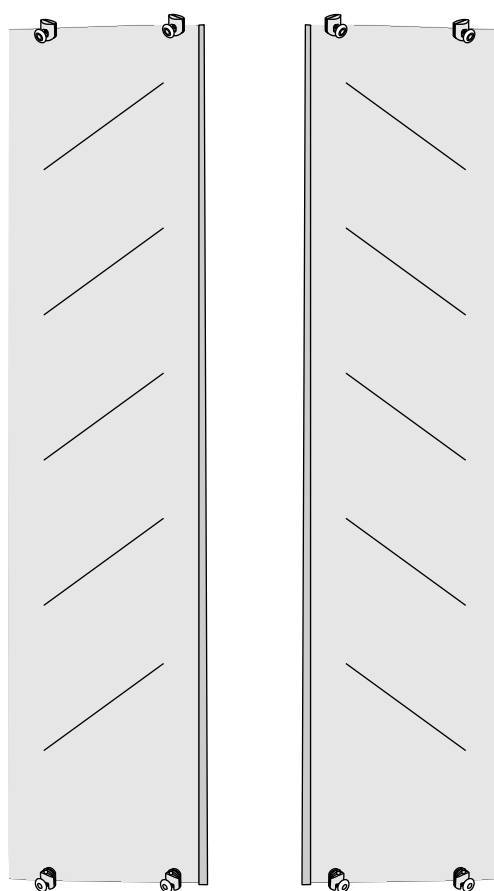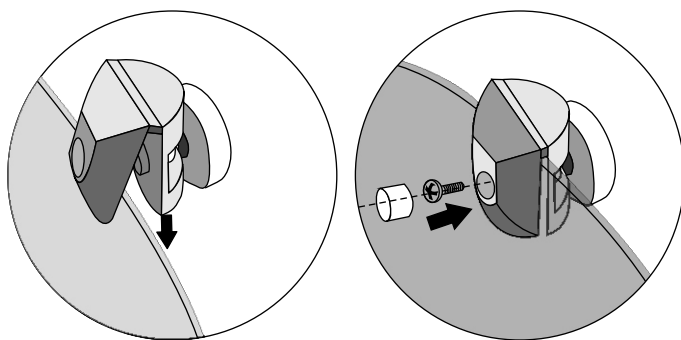


8434/8435

Installation Instructions

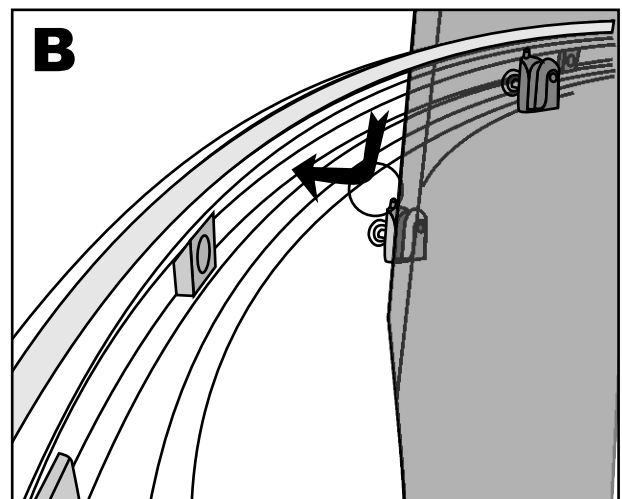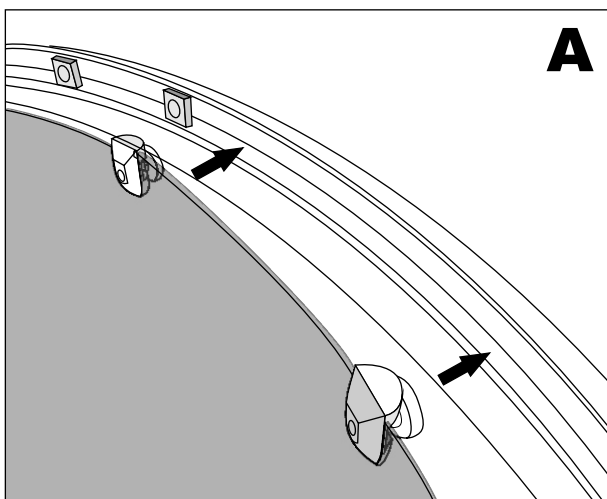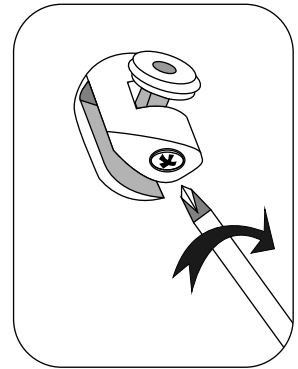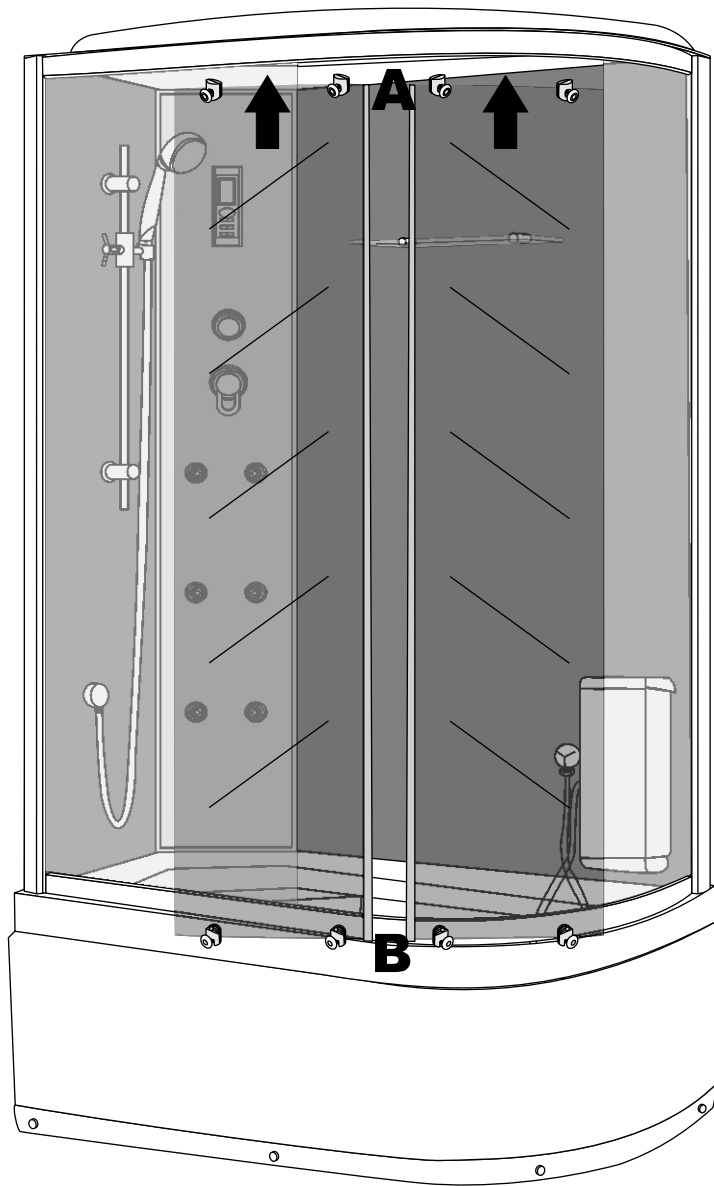

8434/8435

Installation Instructions

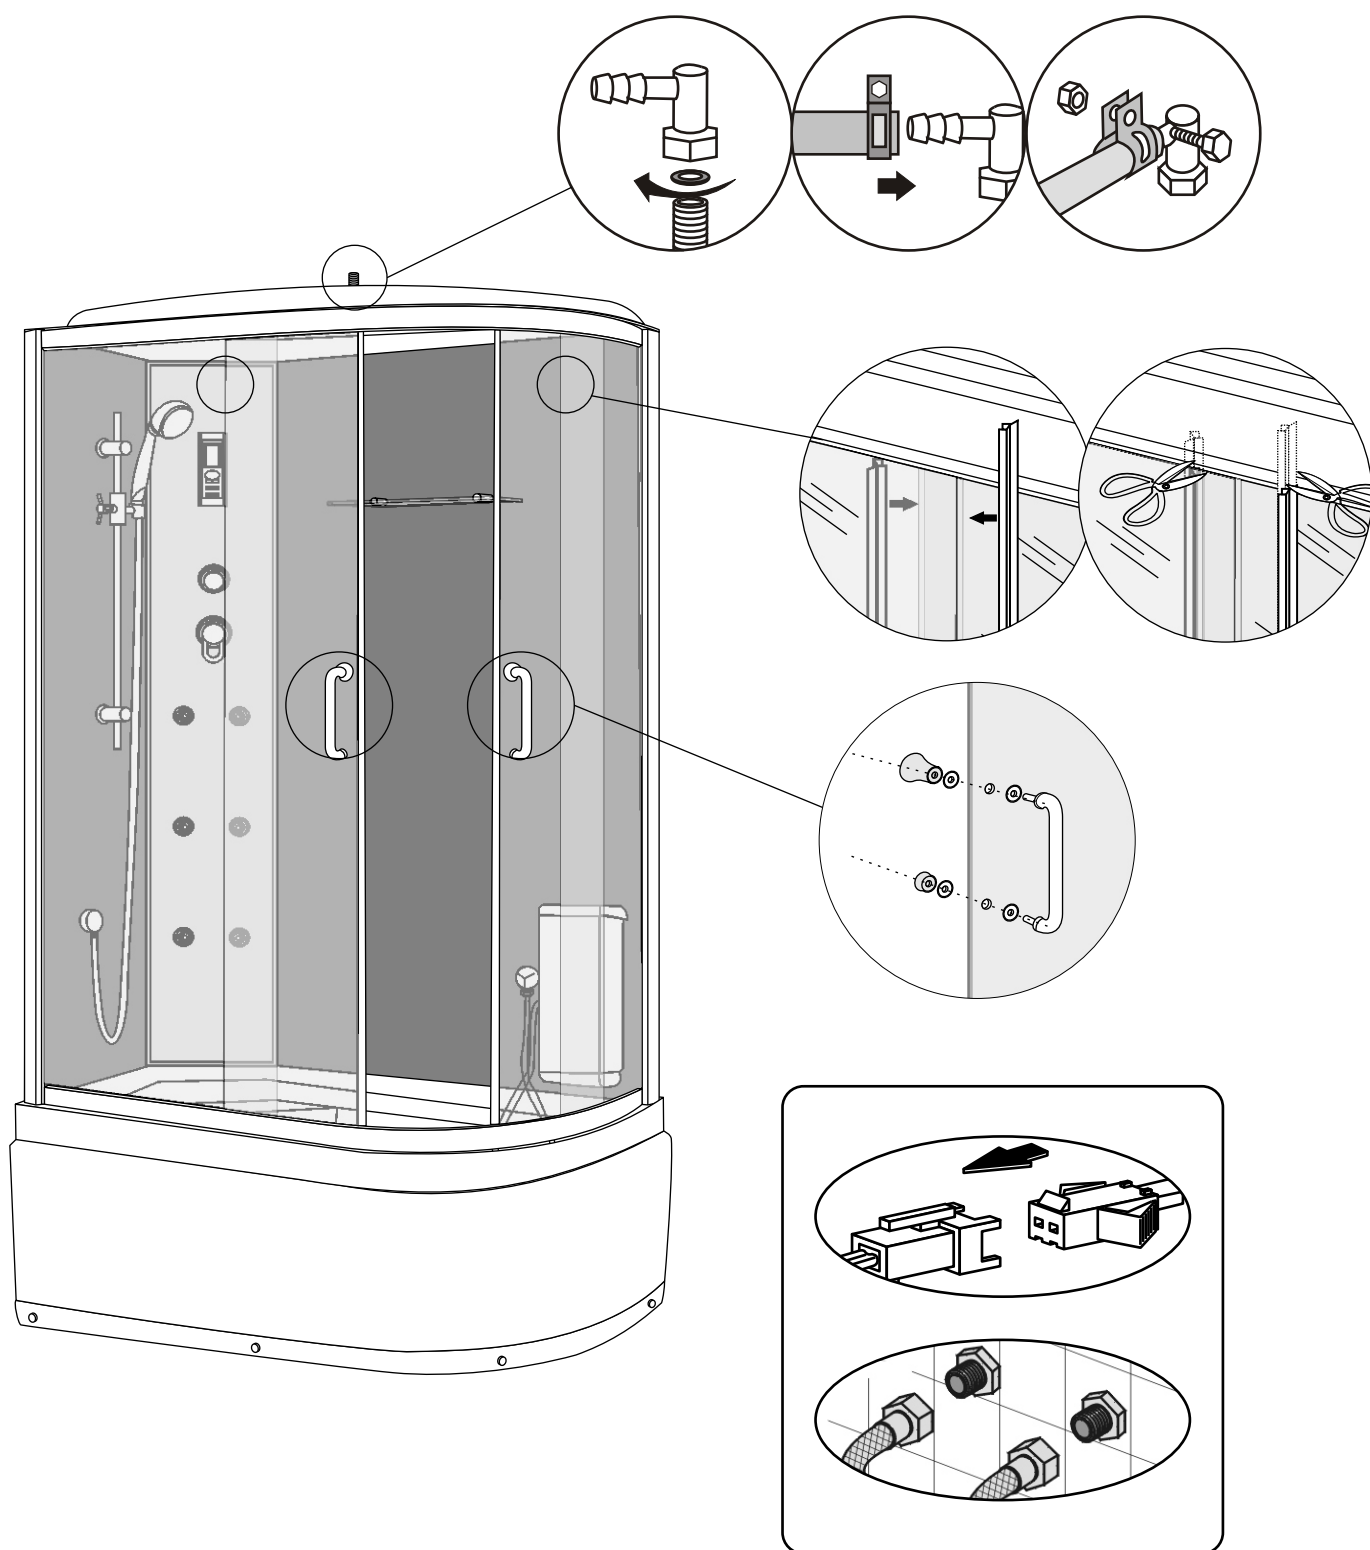

connect the electrical wire of bungalow, power and etc. correctly, connect the hose of head shower, hot water hose and cold water hose correctly, put the antenna to the top.