


8432/8433

Installation Instructions

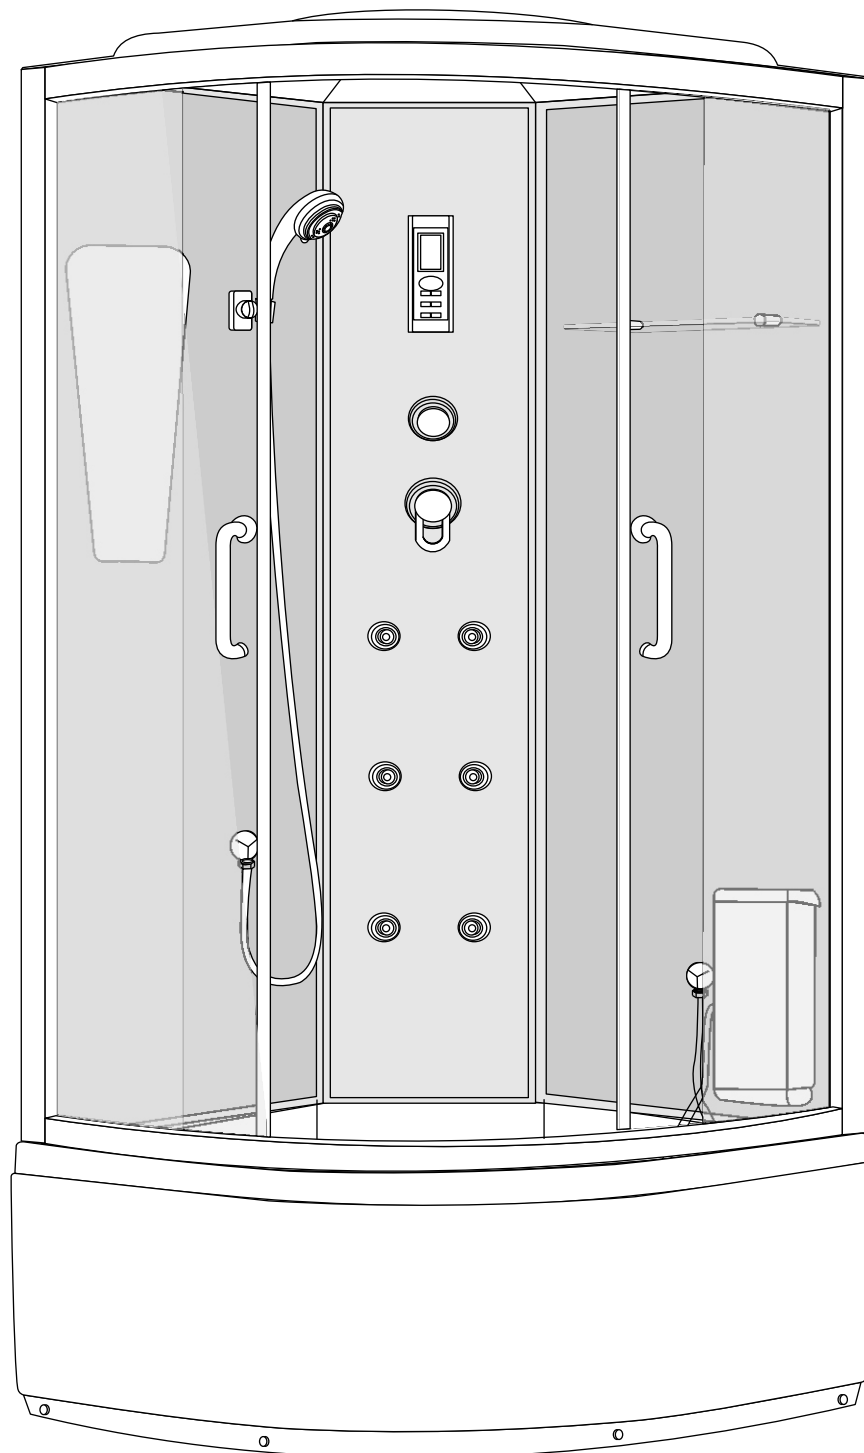

SIZE : 90*90*208 CM
SIZE : 100*100*208 CM


8432/8433

Installation Instructions

TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.


Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.

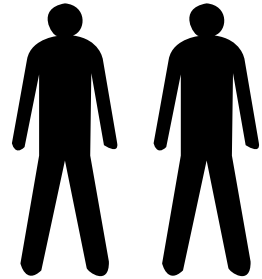


Drill beat head
5. 5mm





Sanitary Silicone

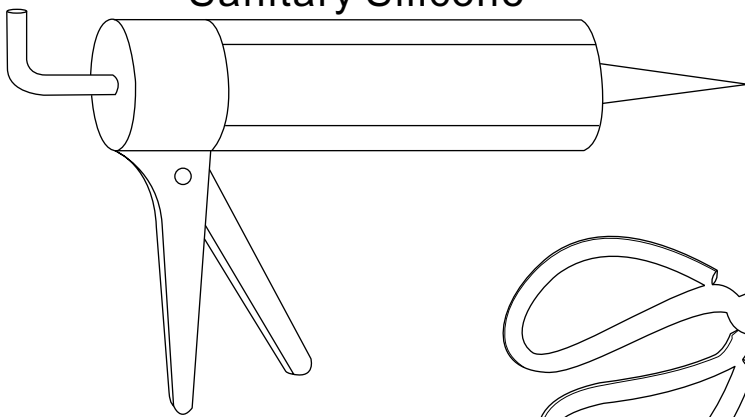


Auger

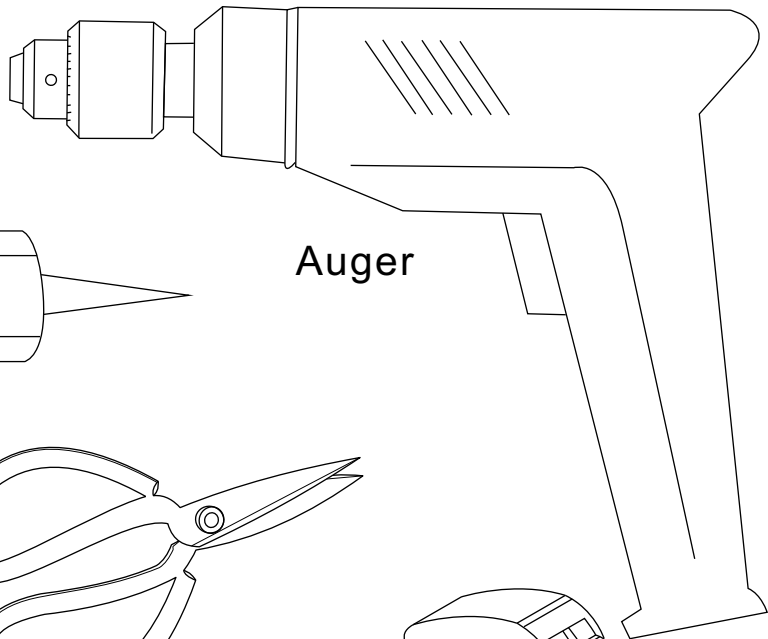


Forfex

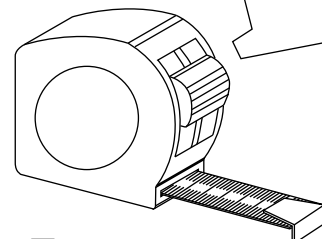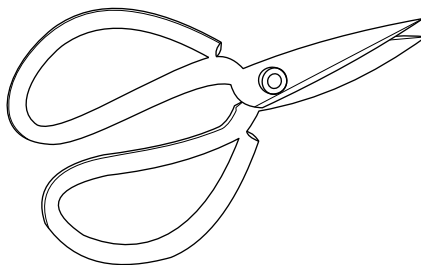


Tape measure

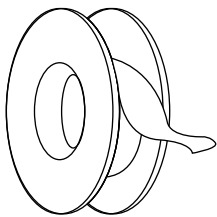


PTFE tape



Pencil







Magnetic crosshead schrewdriver

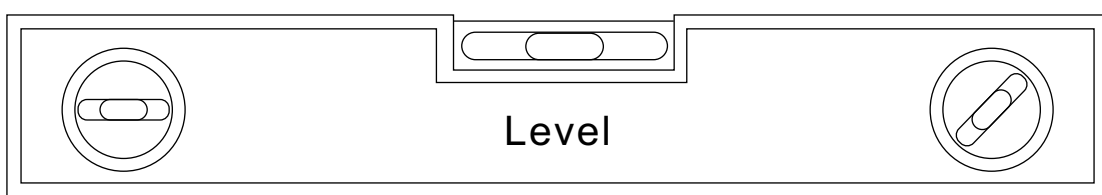

Level

8432/8433


Installation Instructions

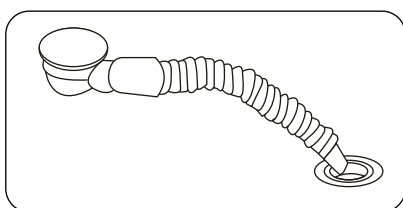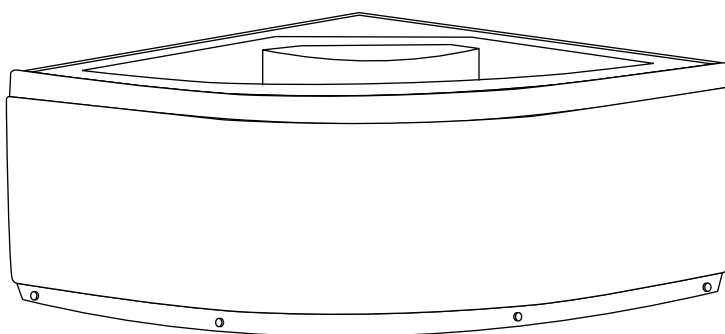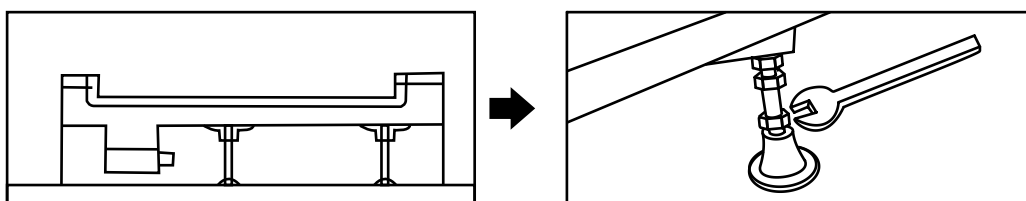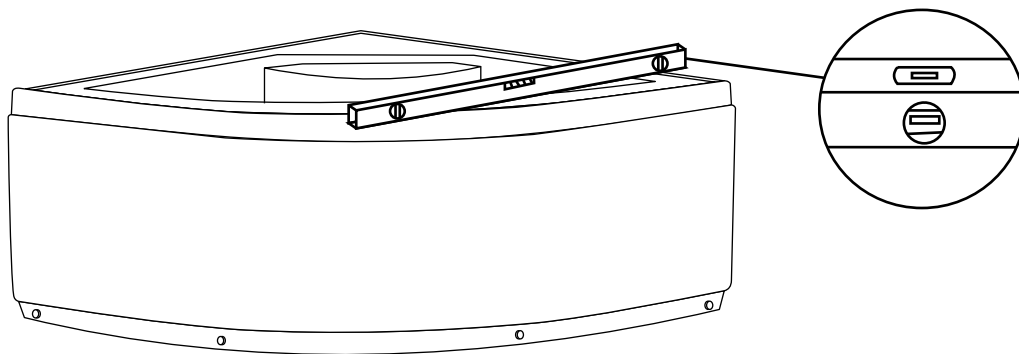

Soulevez la partie arrière du receveur, puis insérez une extrémité du tuyau dans le trou de drainage.



8432/8433

Installation Instructions

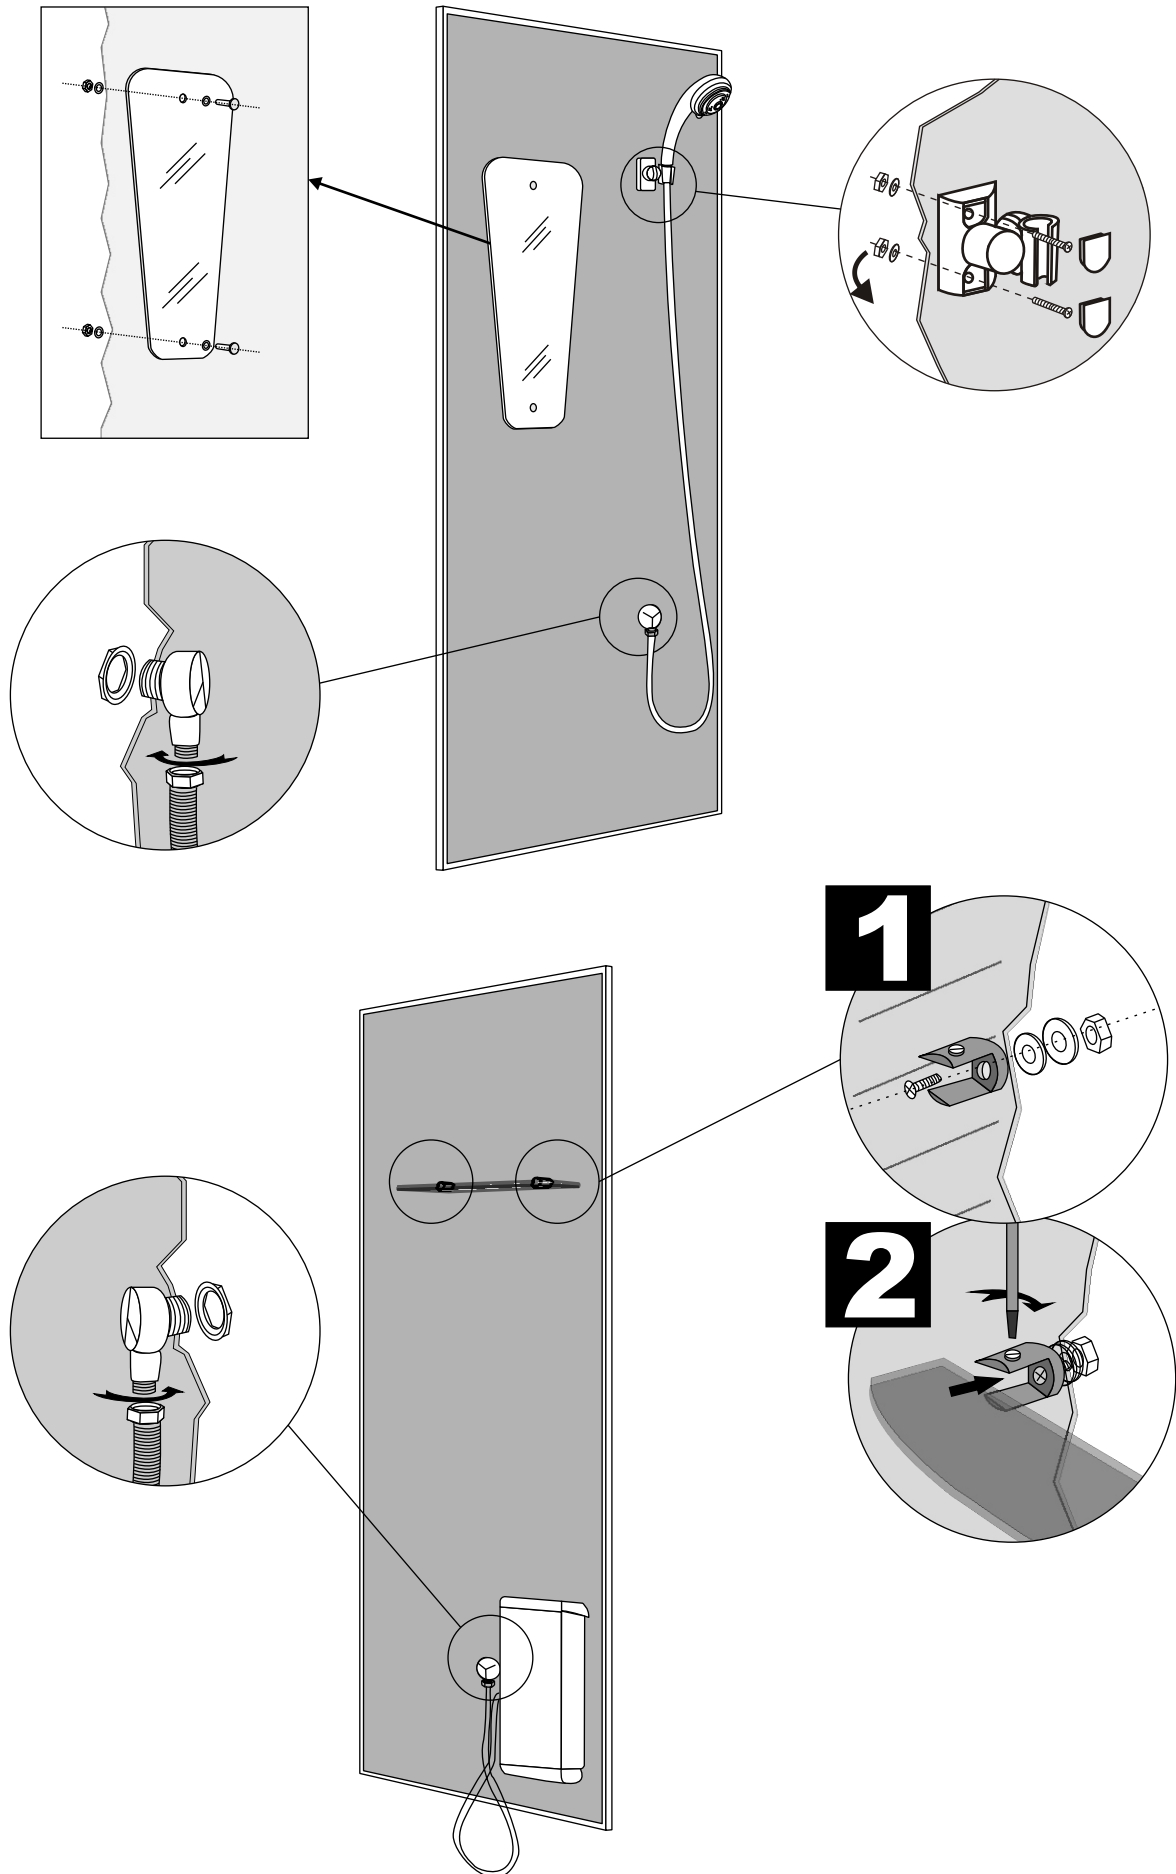




8432/8433

Installation Instructions

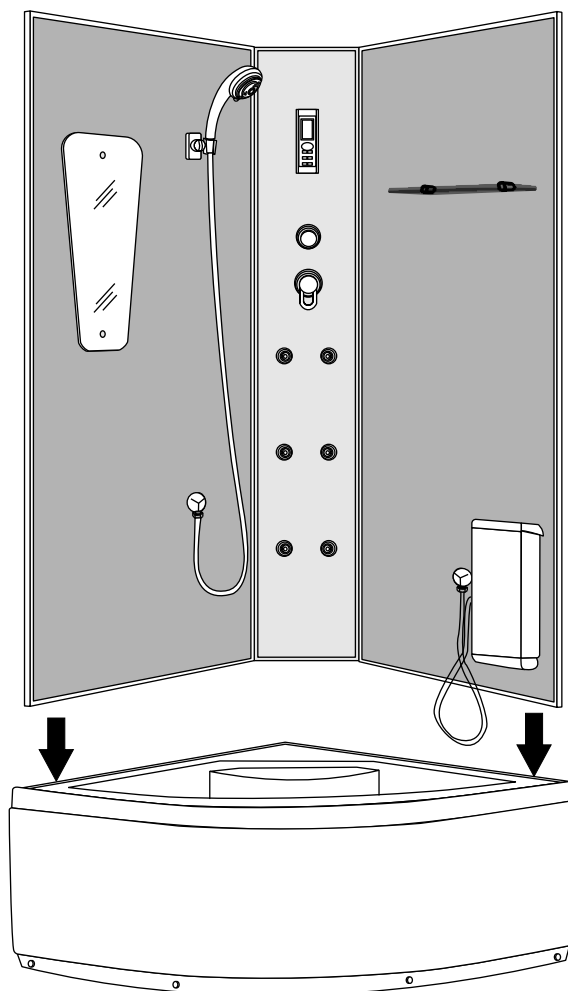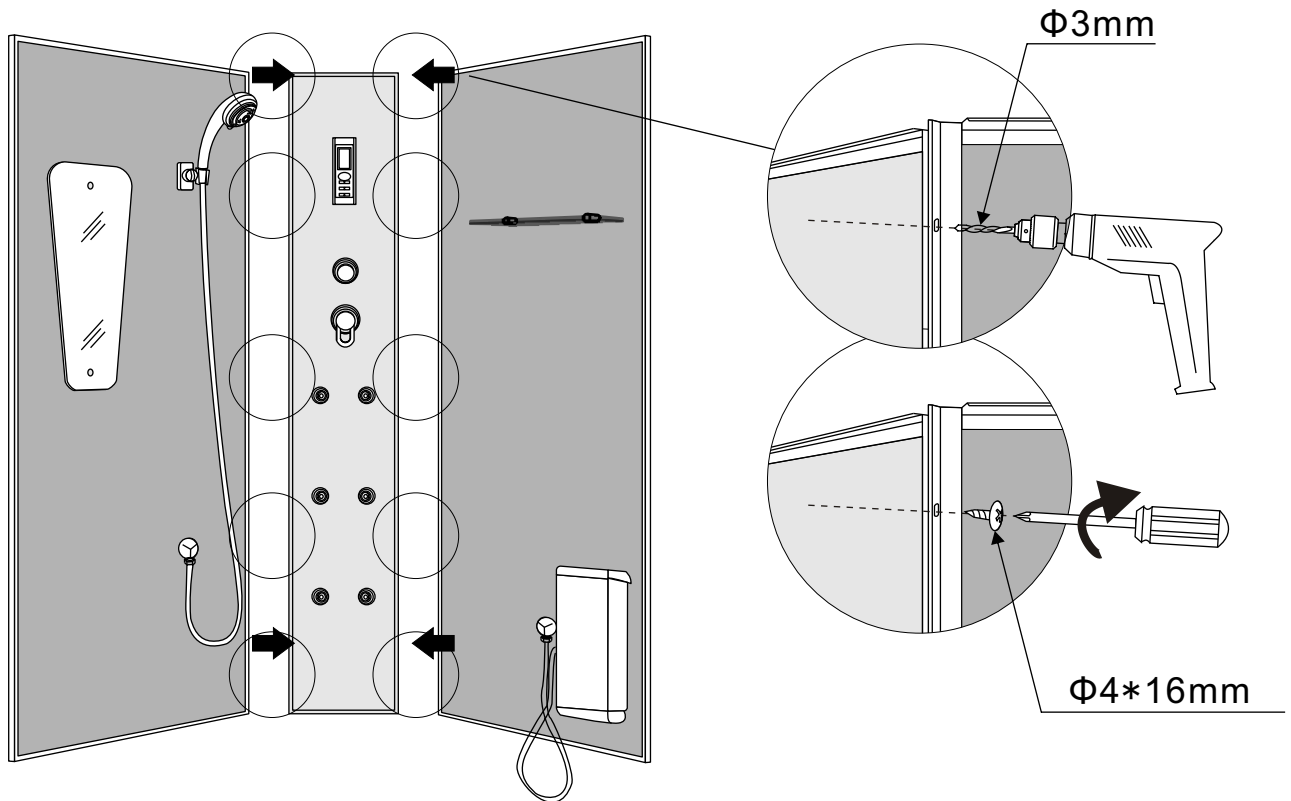



8432/8433

Installation Instructions

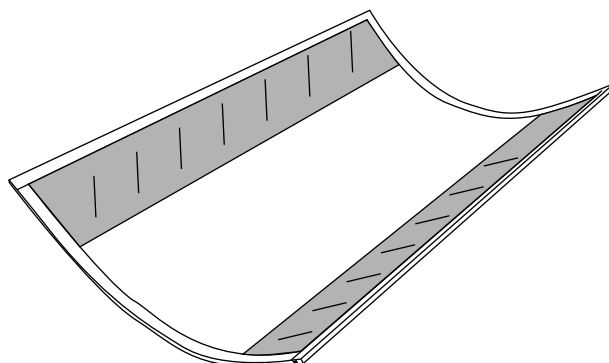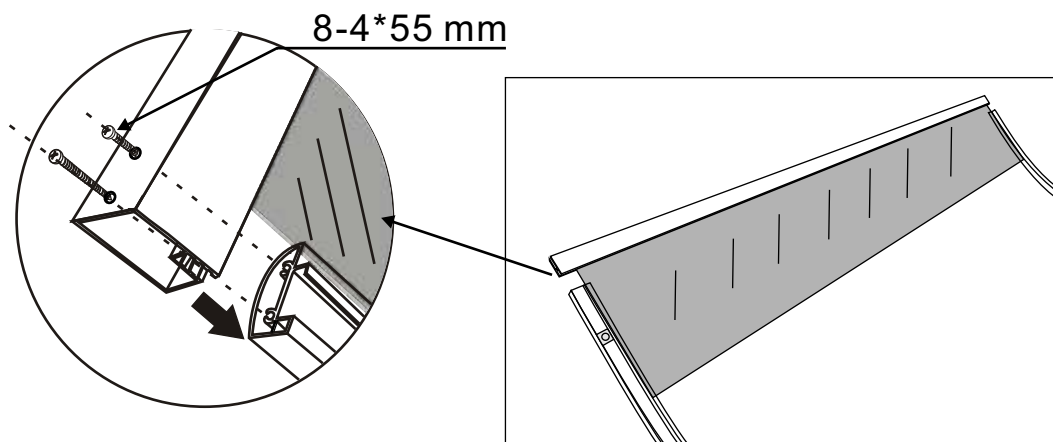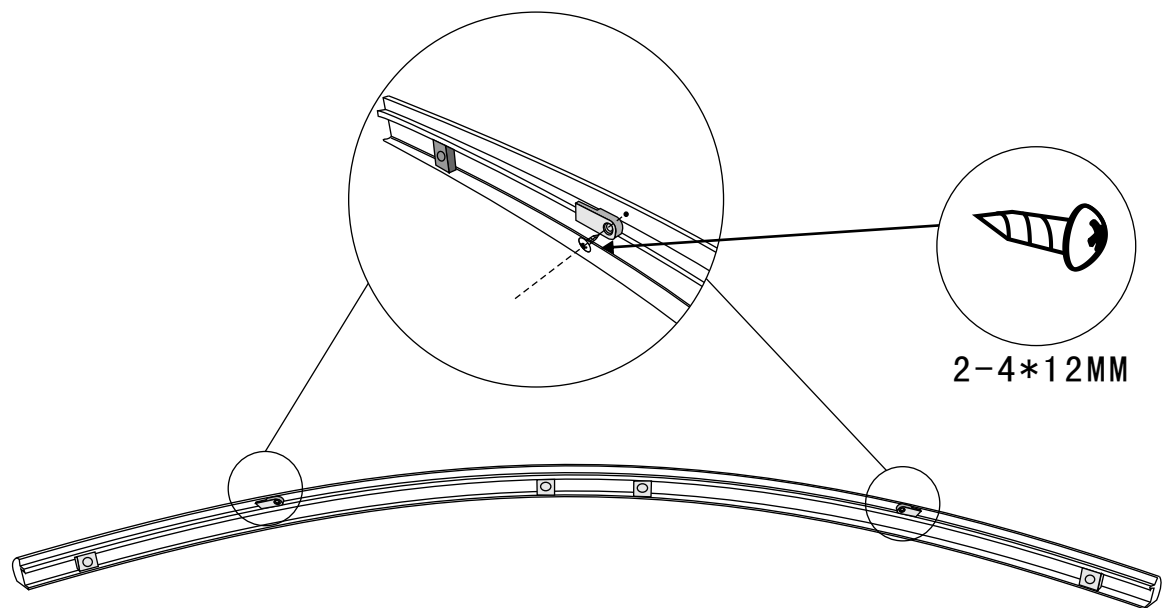



8432/8433

Installation Instructions

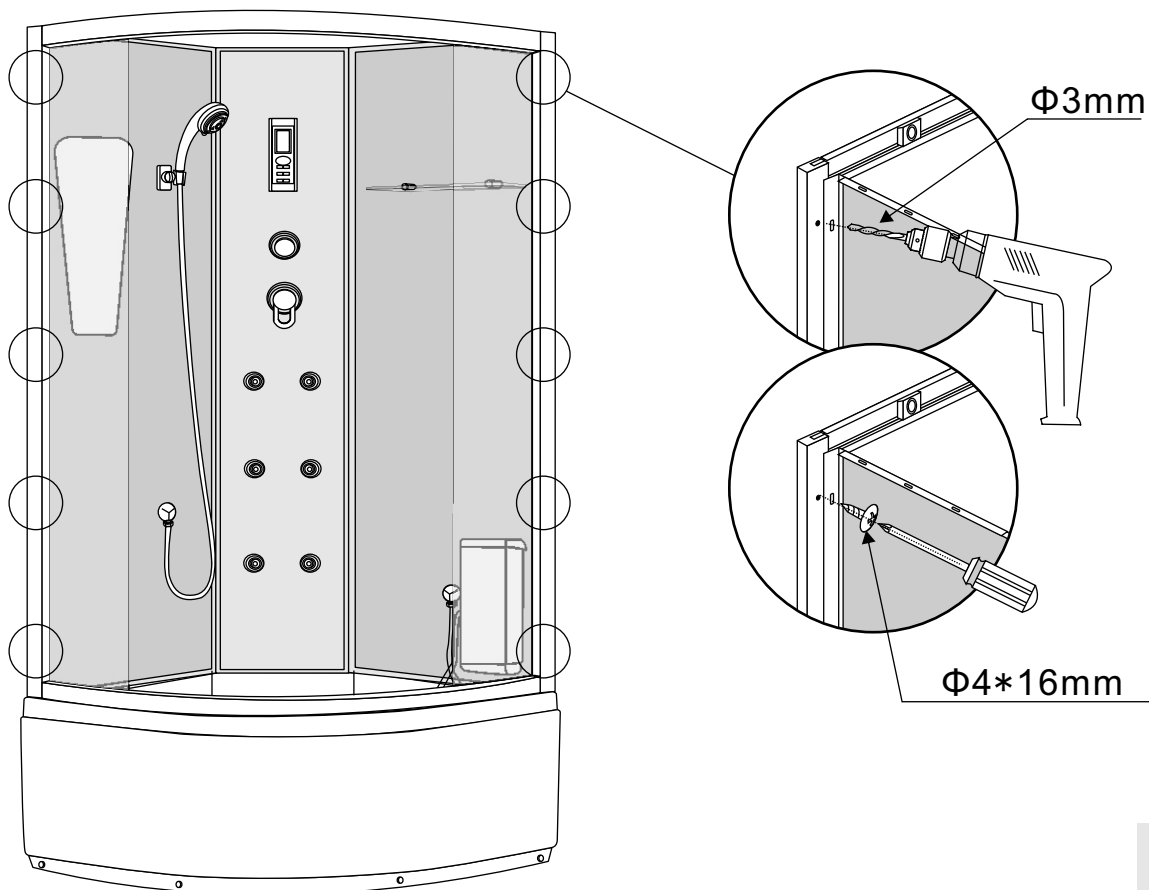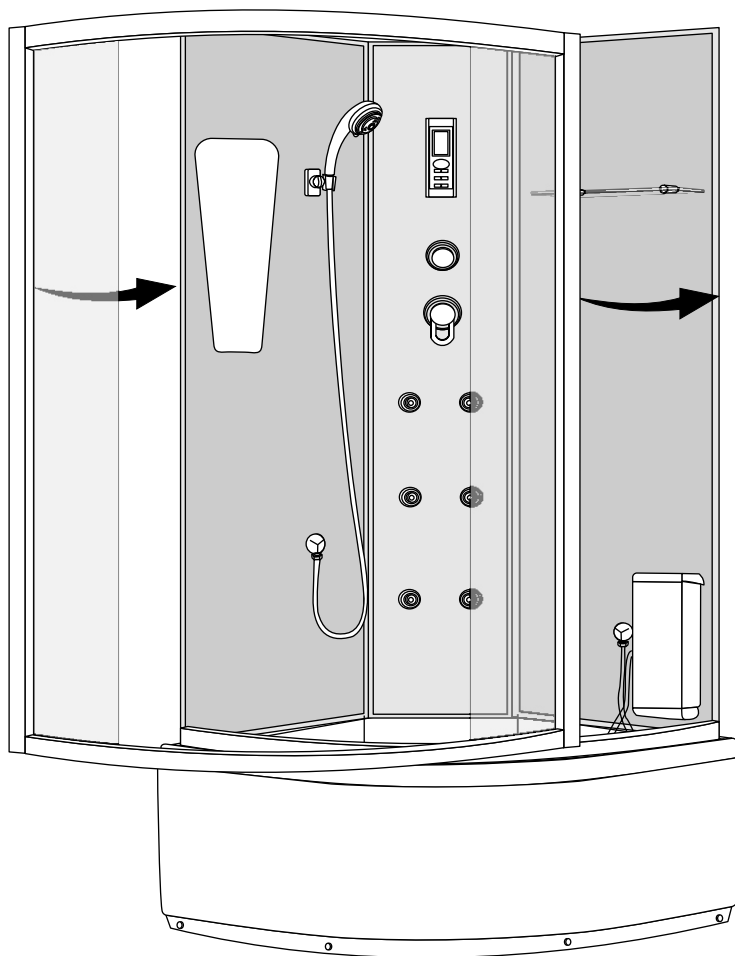




8432/8433

Installation Instructions

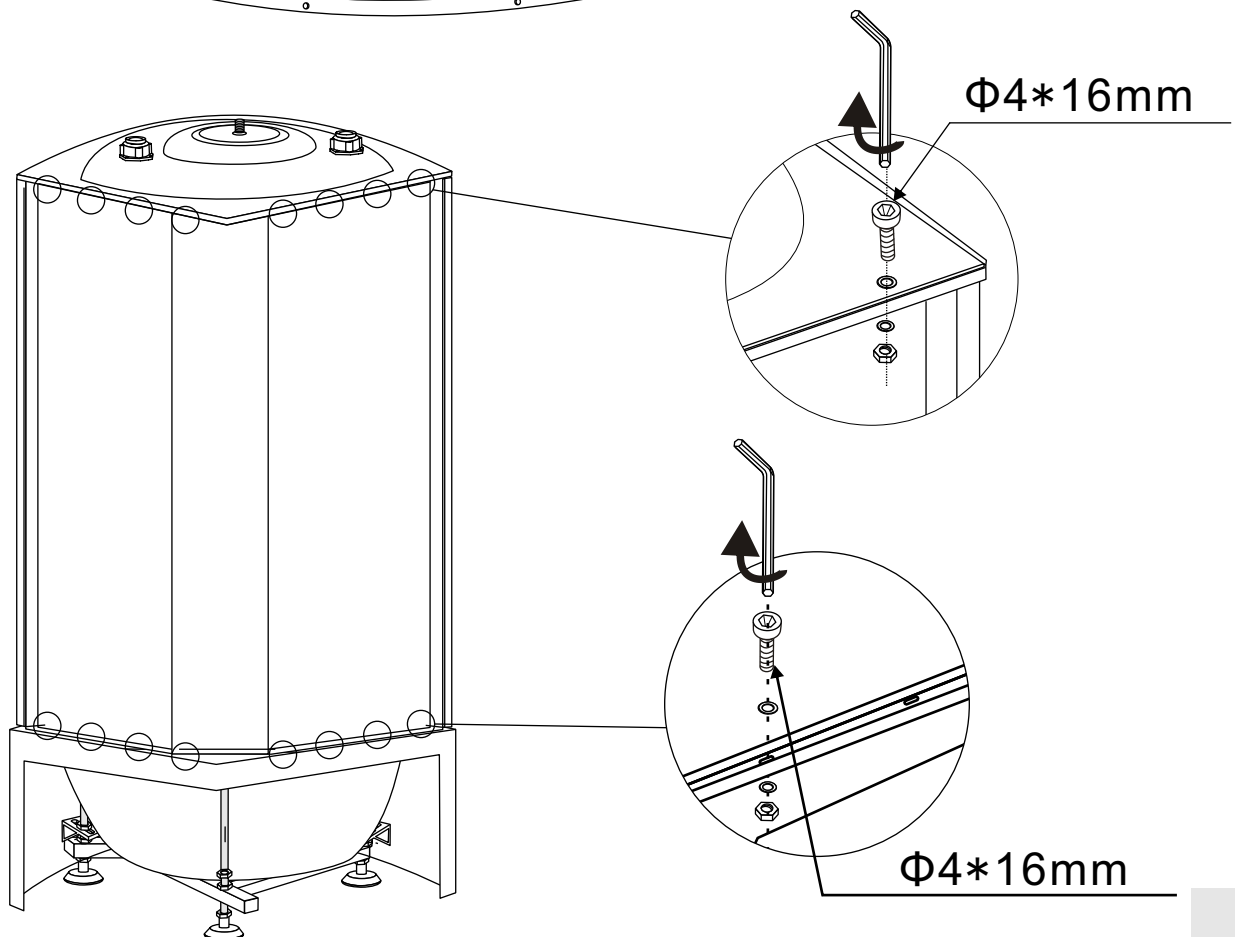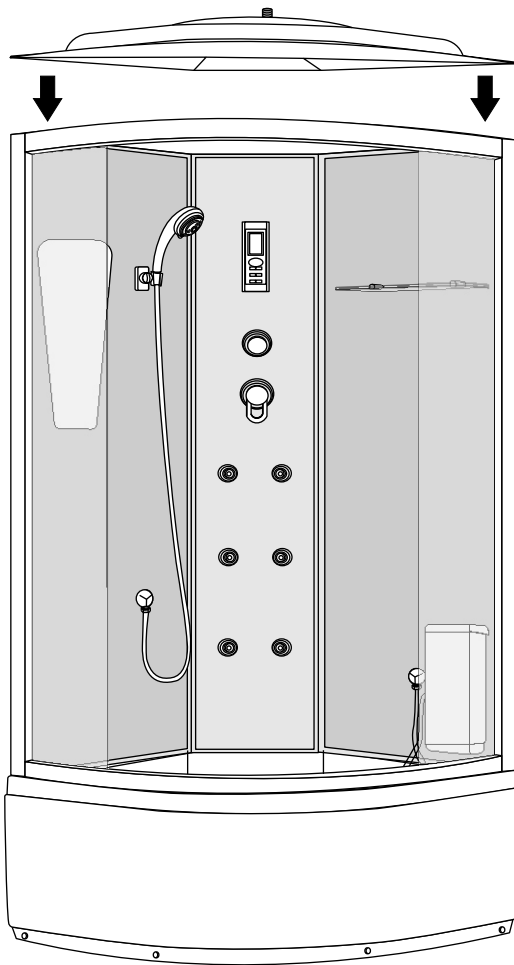





8432/8433

Installation Instructions

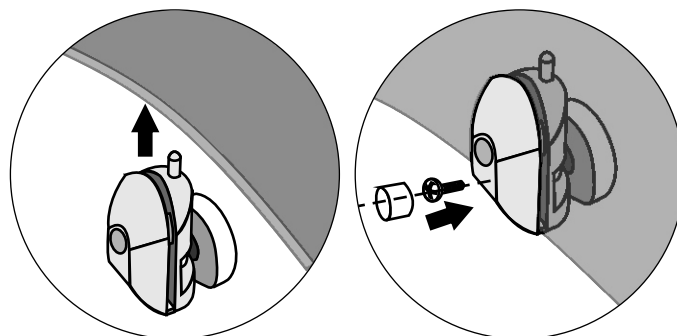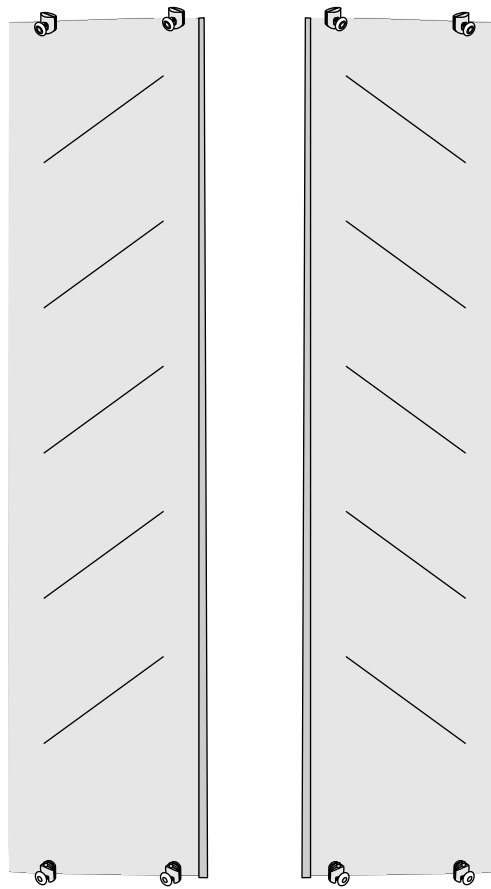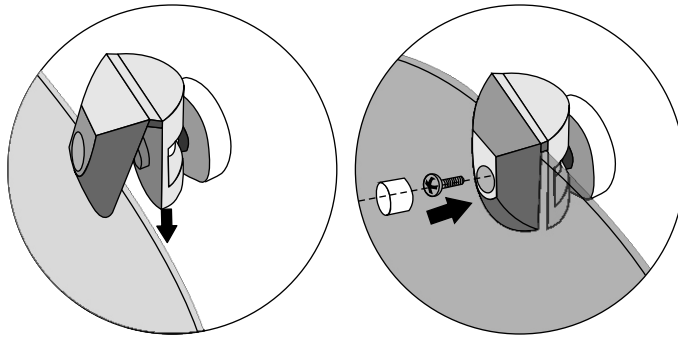


8432/8433

Installation Instructions

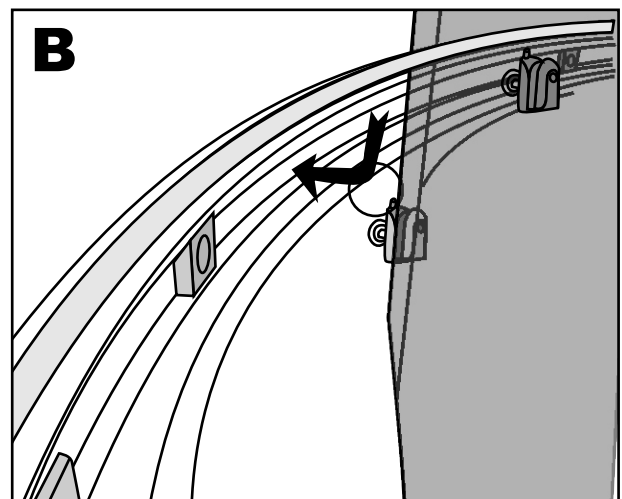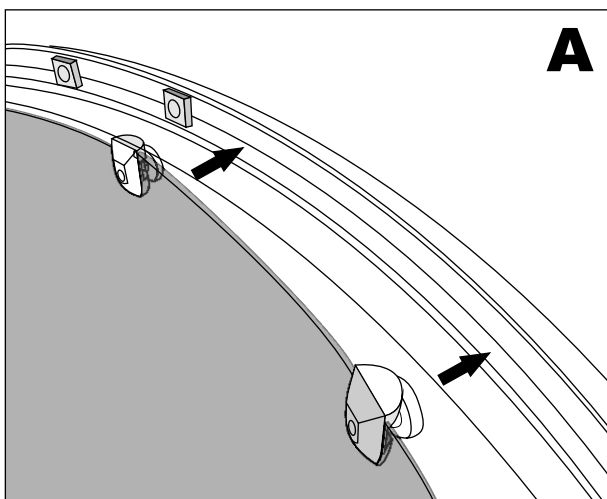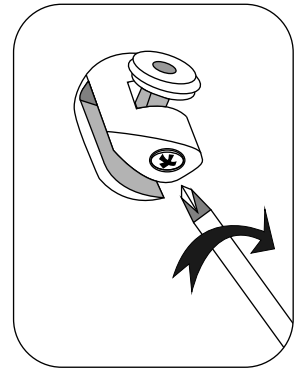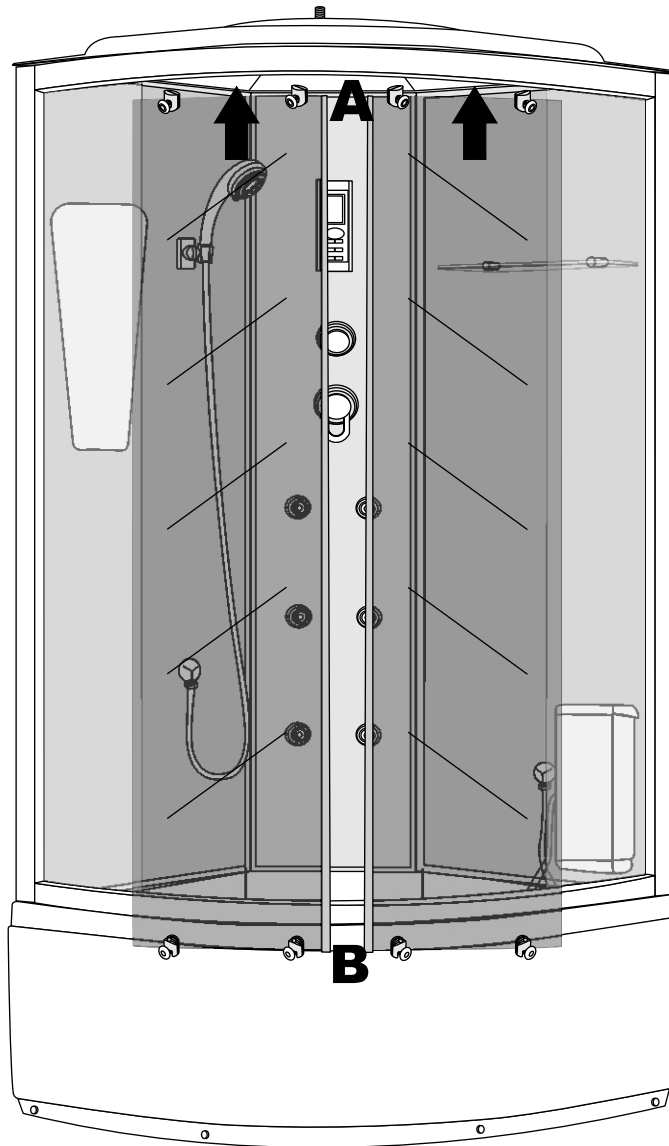

8432/8433

Installation Instructions

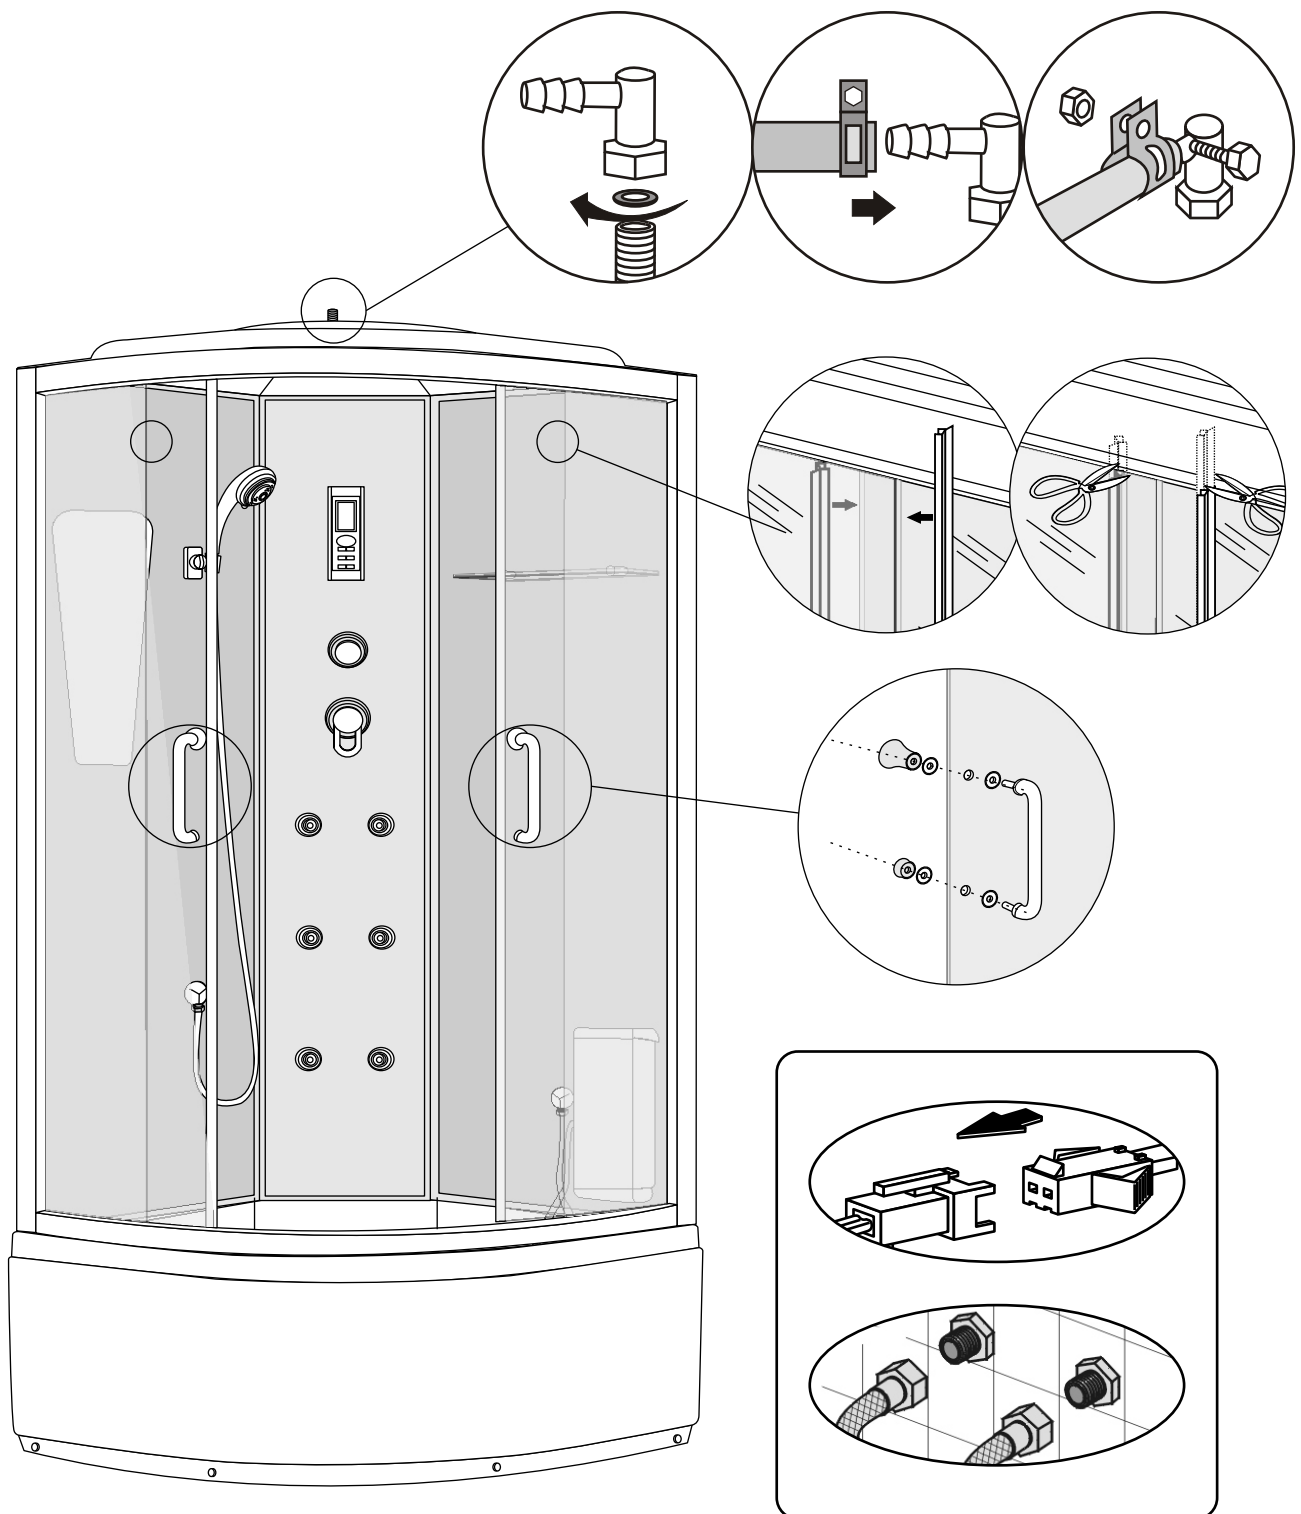

connect the electrical wire of bungalow, power and etc. correctly, connect the hose of head shower, hot water hose and cold water hose correctly, put the antenna to the top.