


# 8430/8431

## Installation Instructions

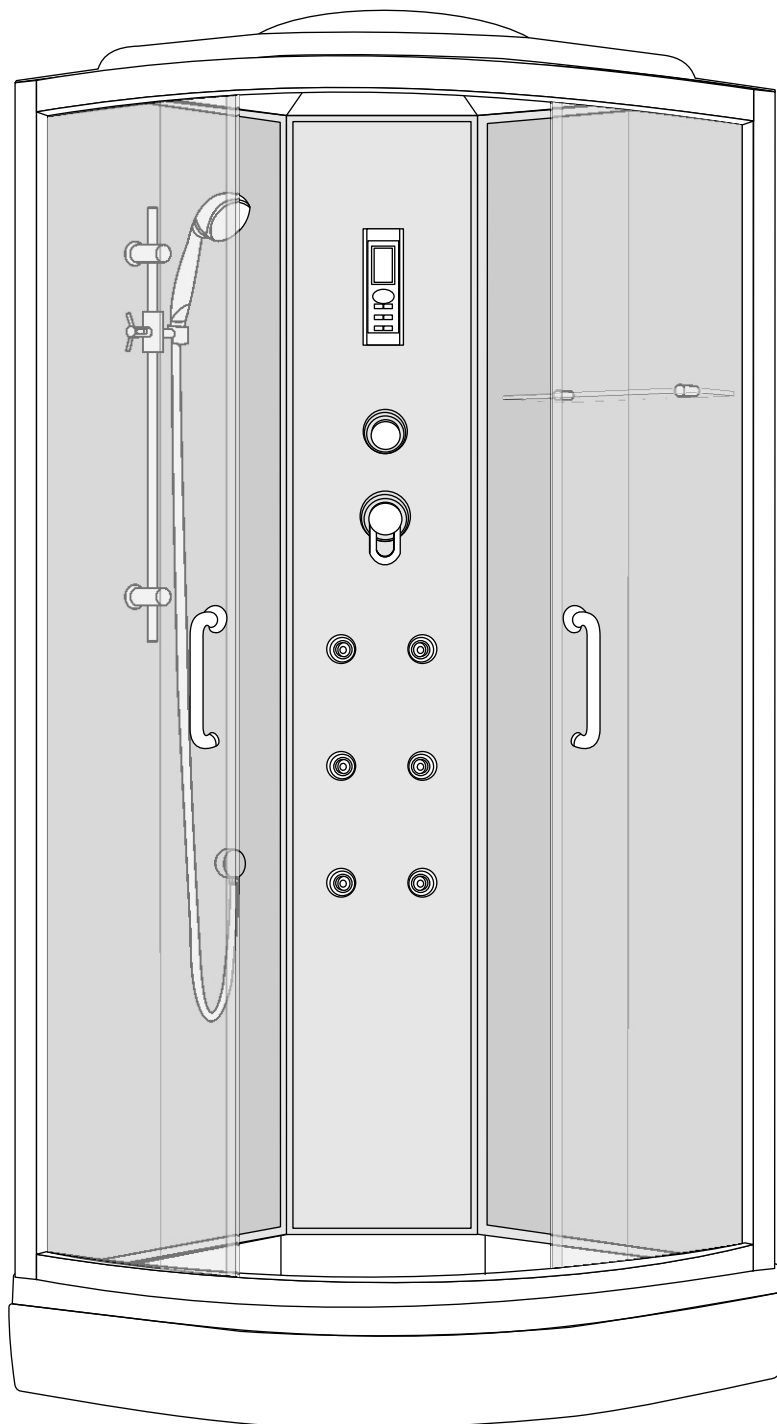

SIZE:90\*90\*220 CM  
SIZE:100\*100\*220 CM


# 8430/8431

## Installation Instructions

### TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.


Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.

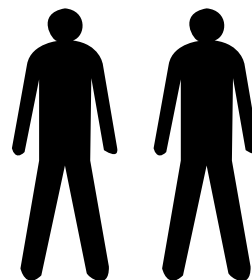


Drill beat head  
5. 5mm





Sanitary Silicone

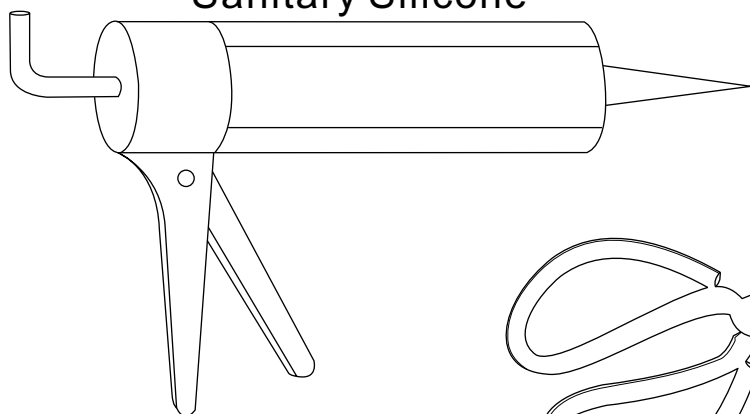


Auger

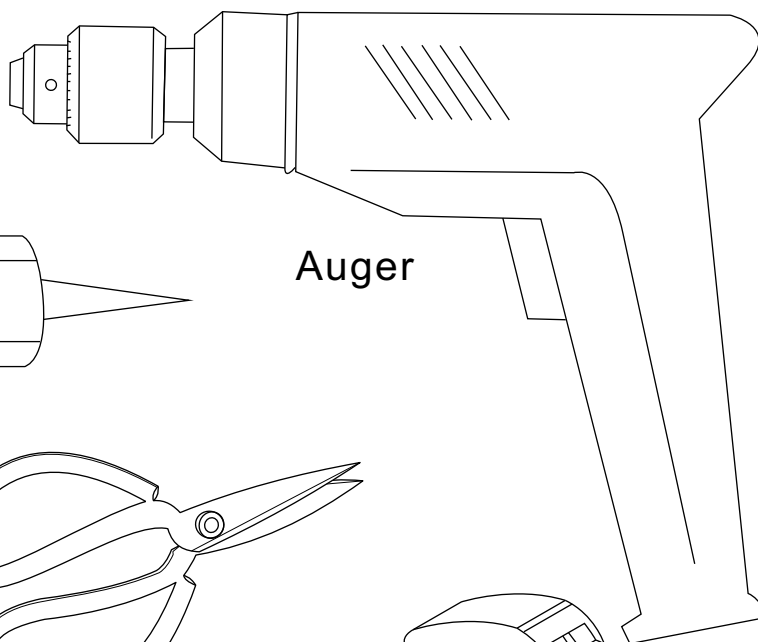


Forfex

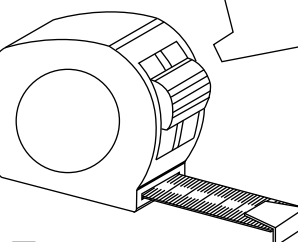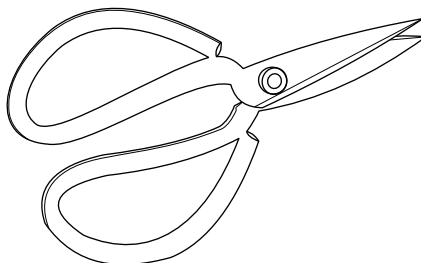


Tape measure

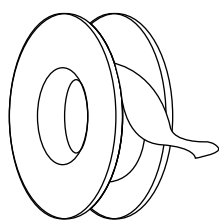


PTFE tape



Pencil

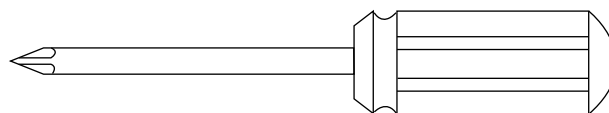





Magnetic crosshead schrewdriver

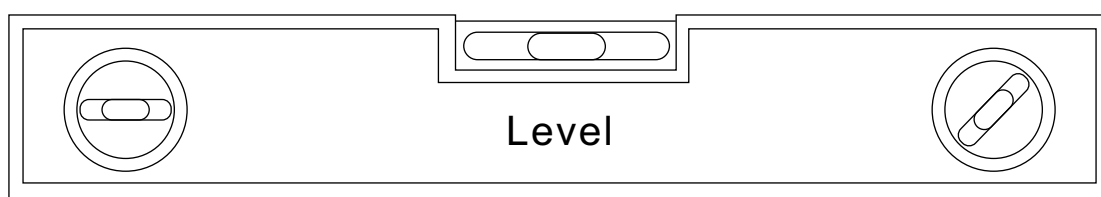

Level

# 8430/8431


## Installation Instructions

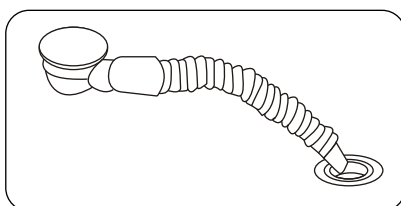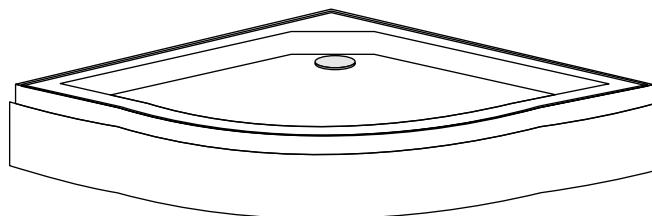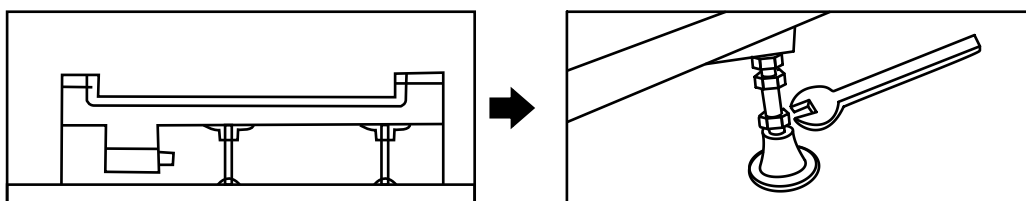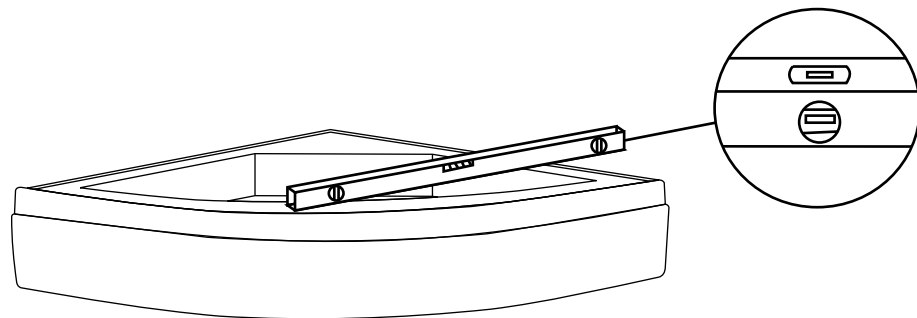

Soulevez la partie arrière du receveur, puis insérez une extrémité du tuyau dans le trou de drainage.



# 8430/8431

## Installation Instructions

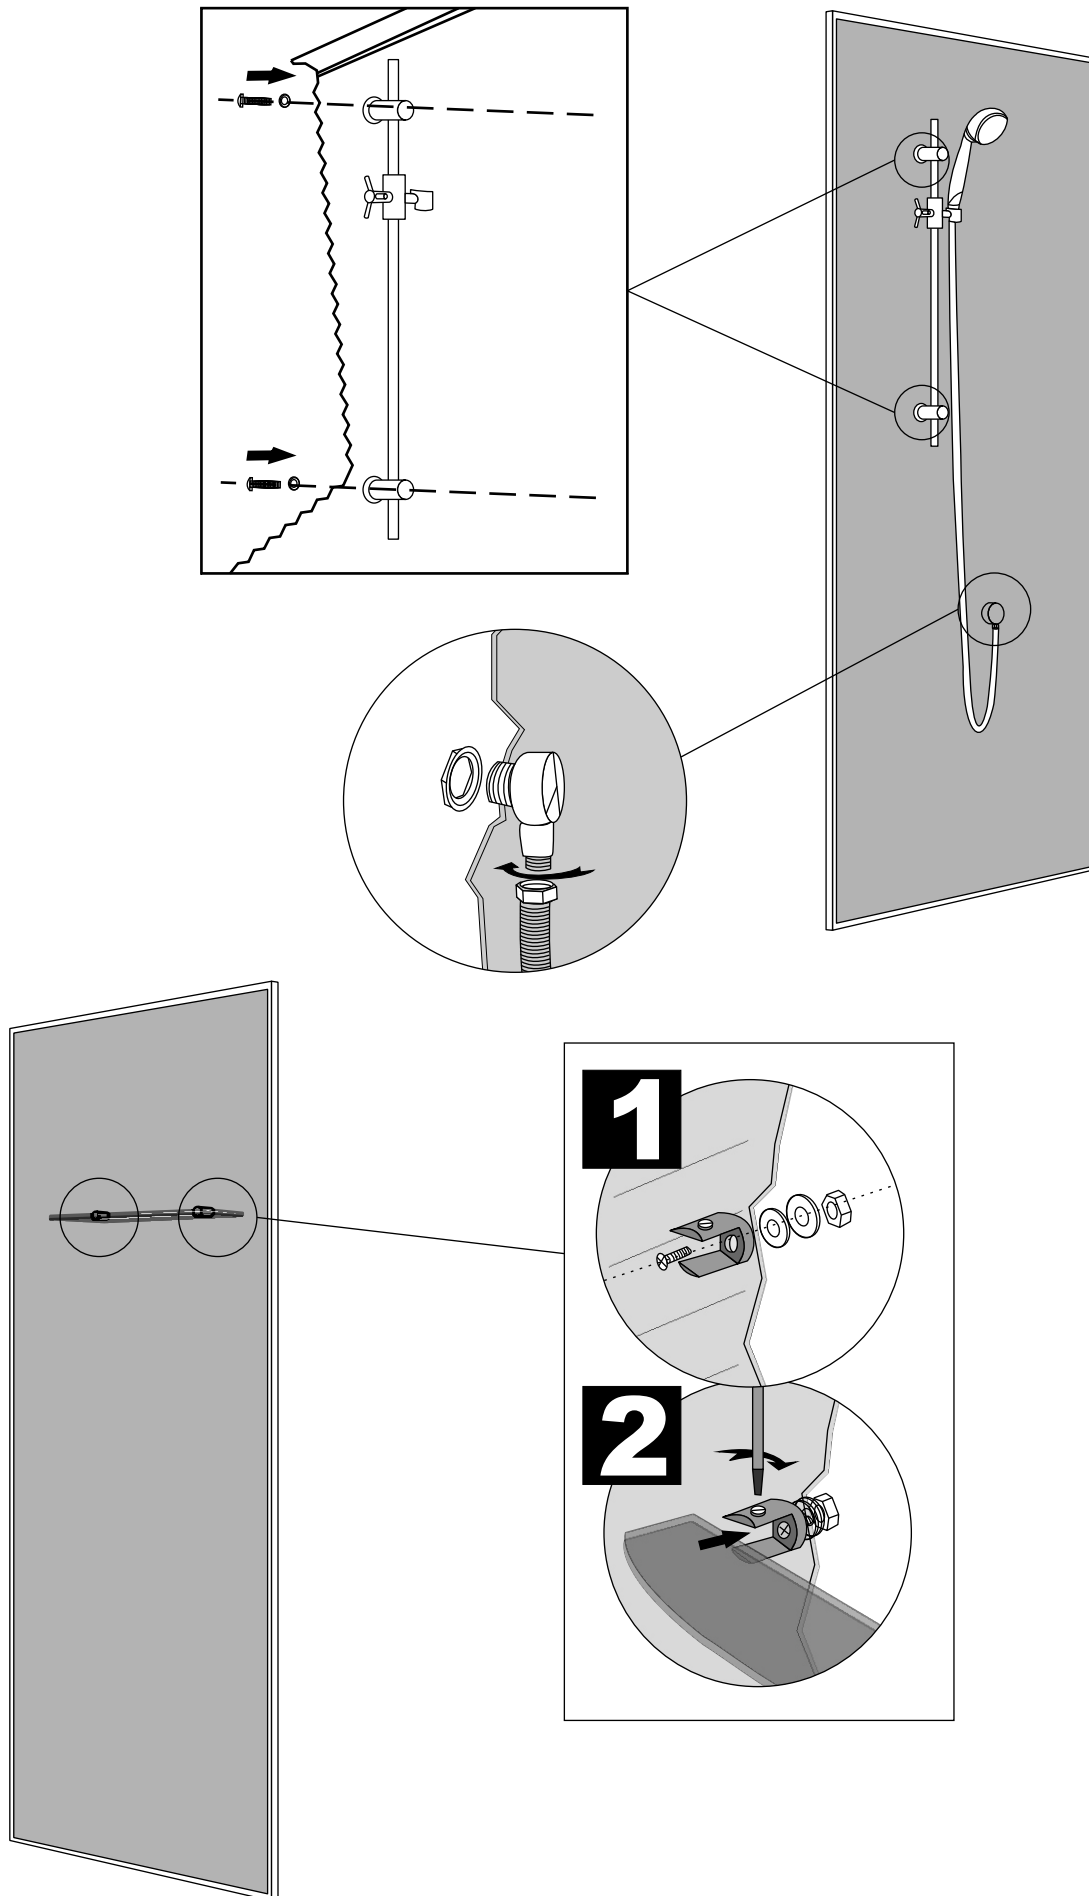




# 8430/8431

## Installation Instructions

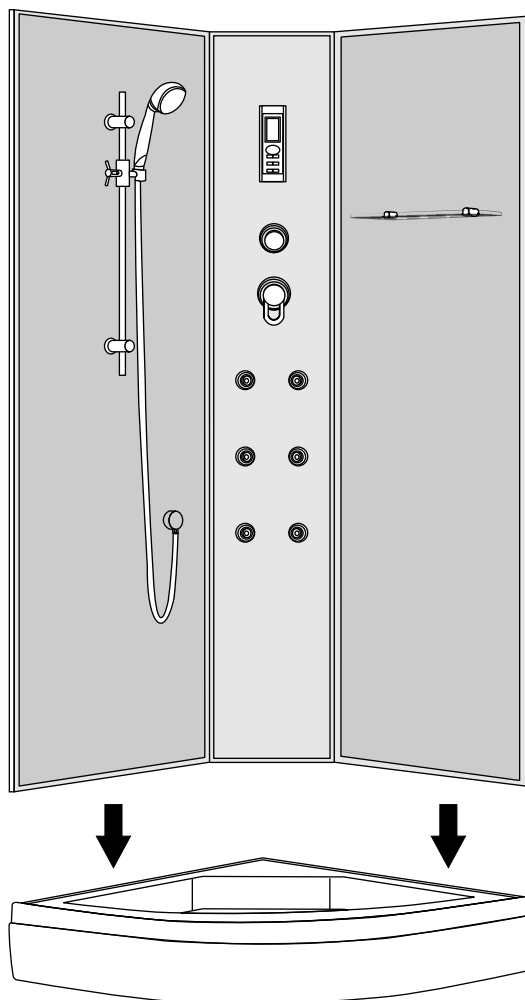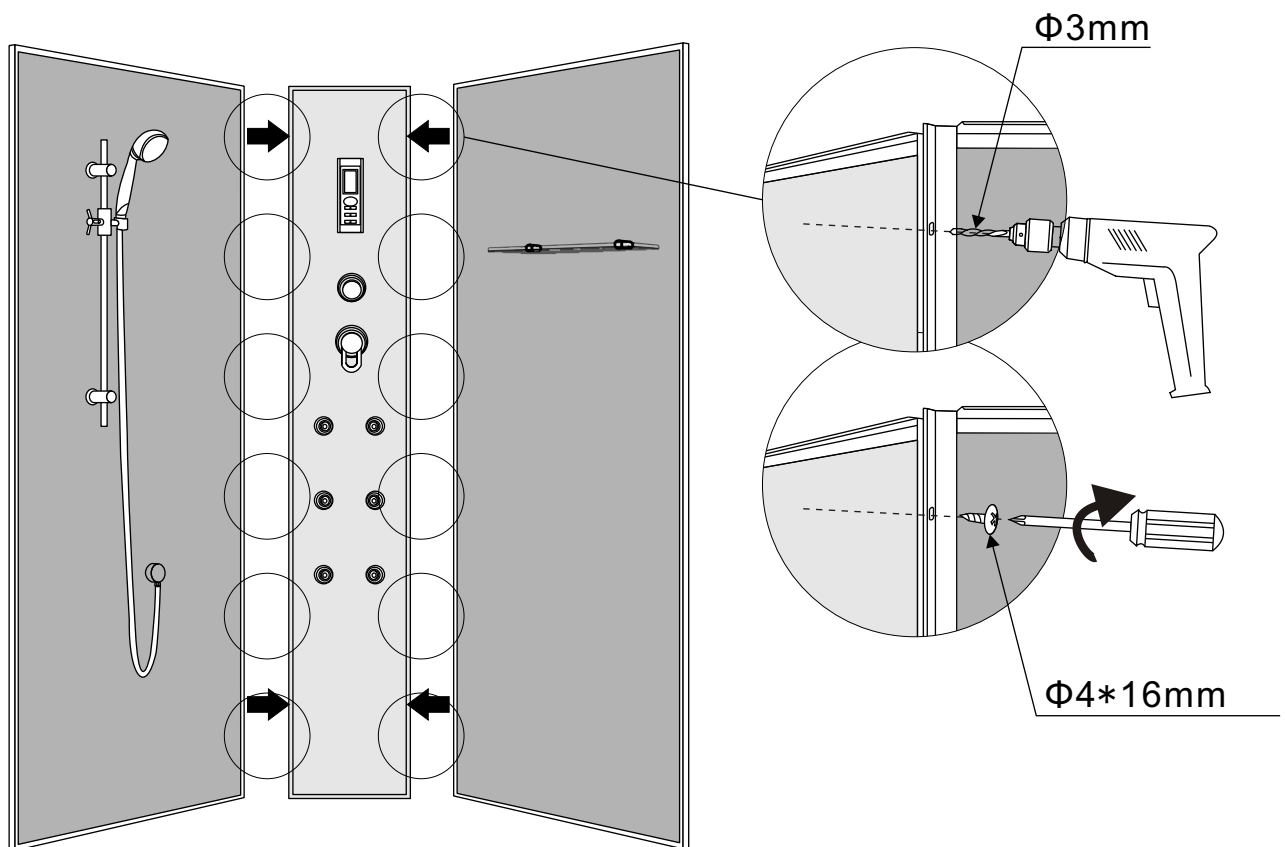



# 8430/8431

## Installation Instructions


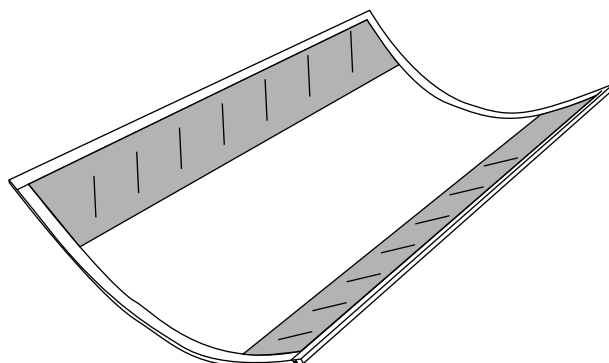
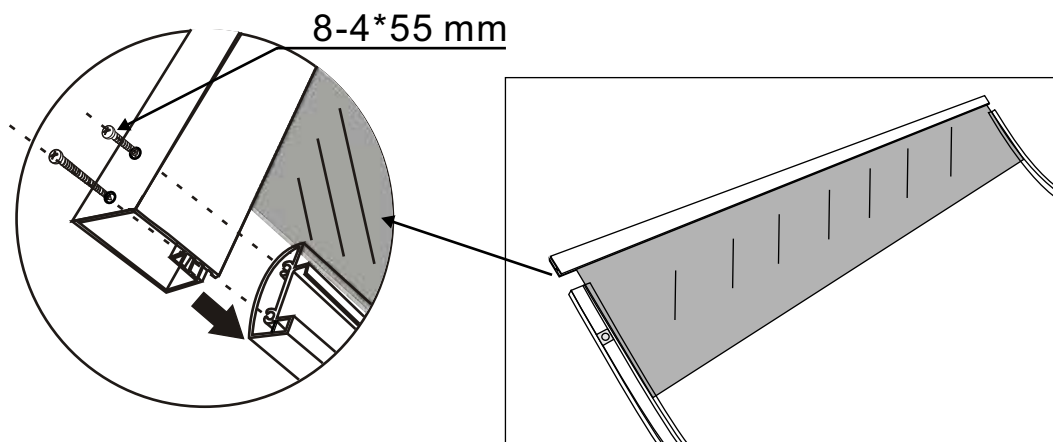
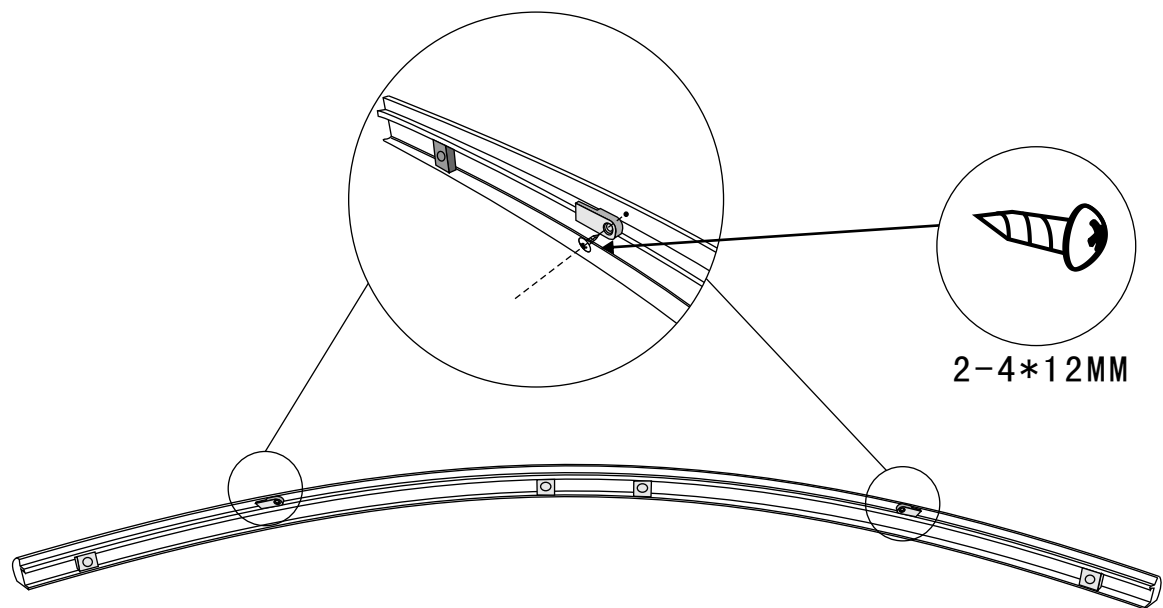


# 8430/8431

## Installation Instructions


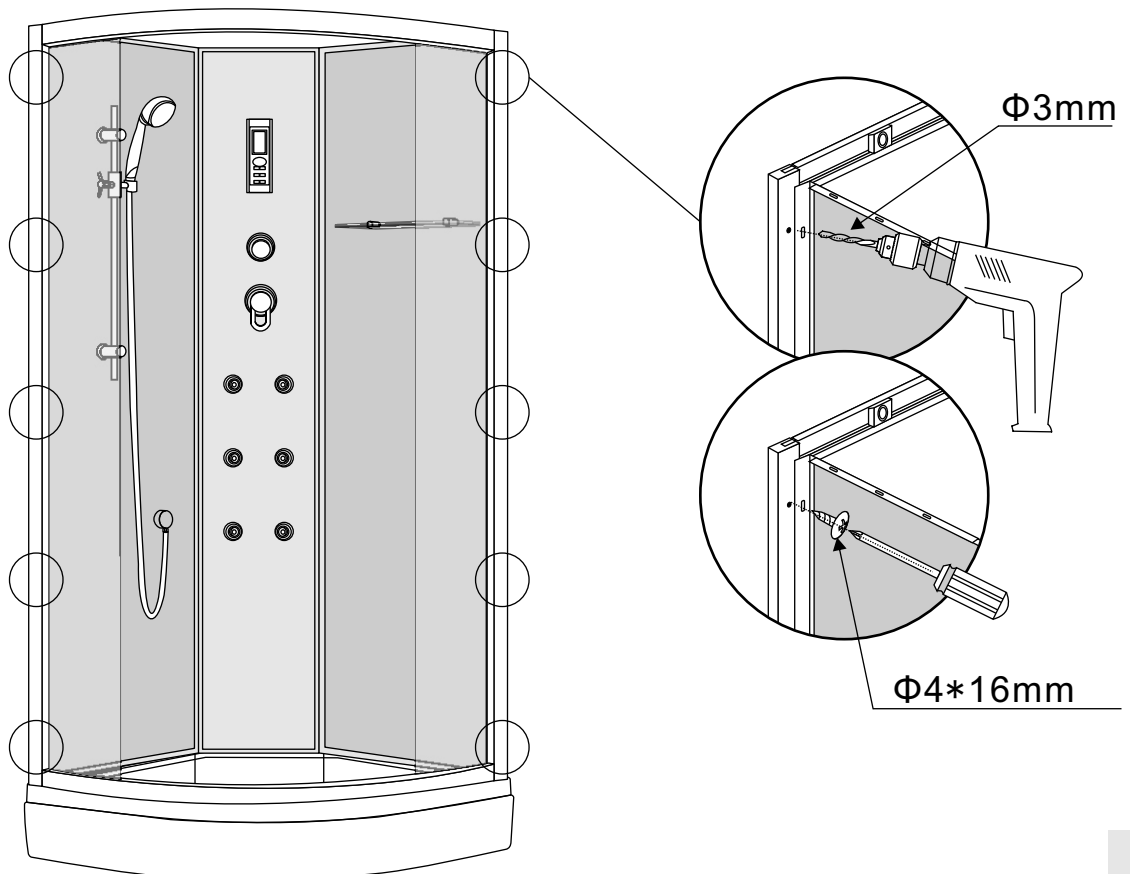
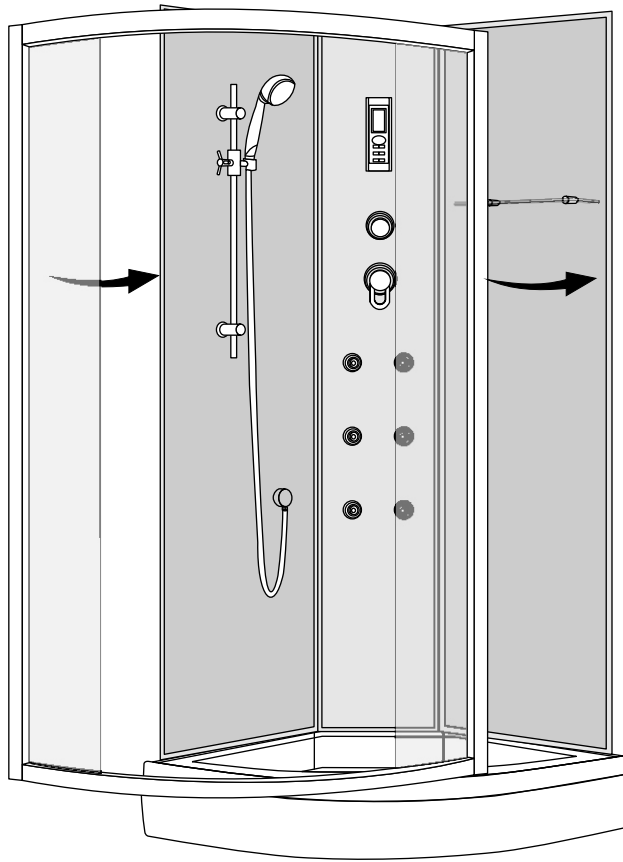


# 8430/8431 Installation Instructions

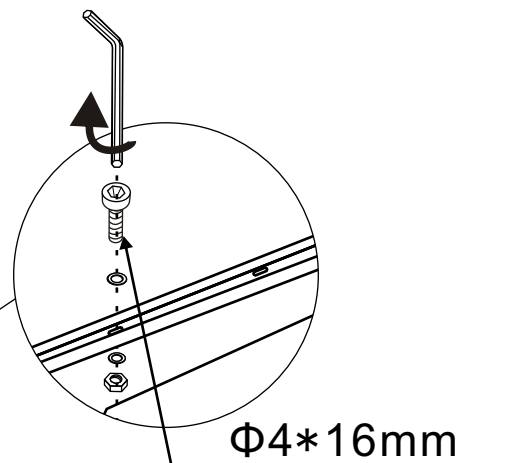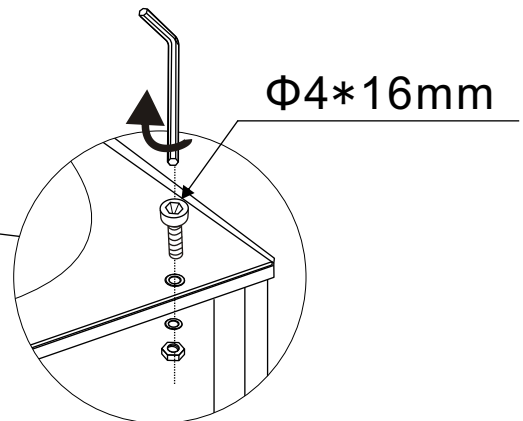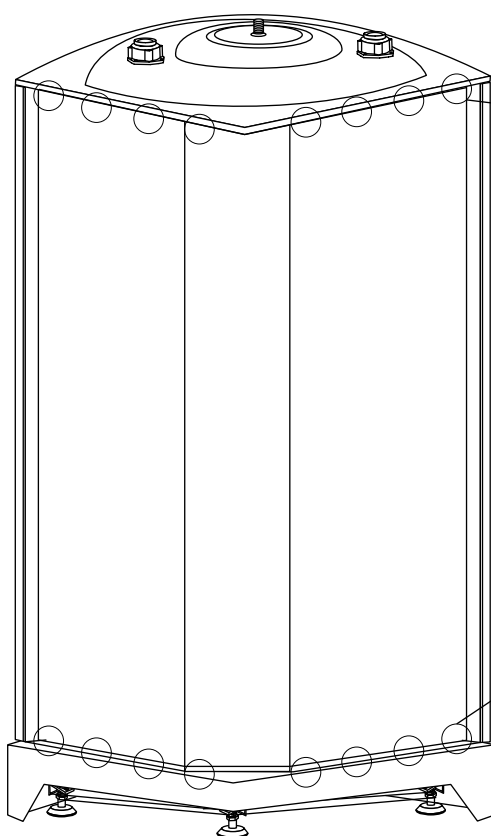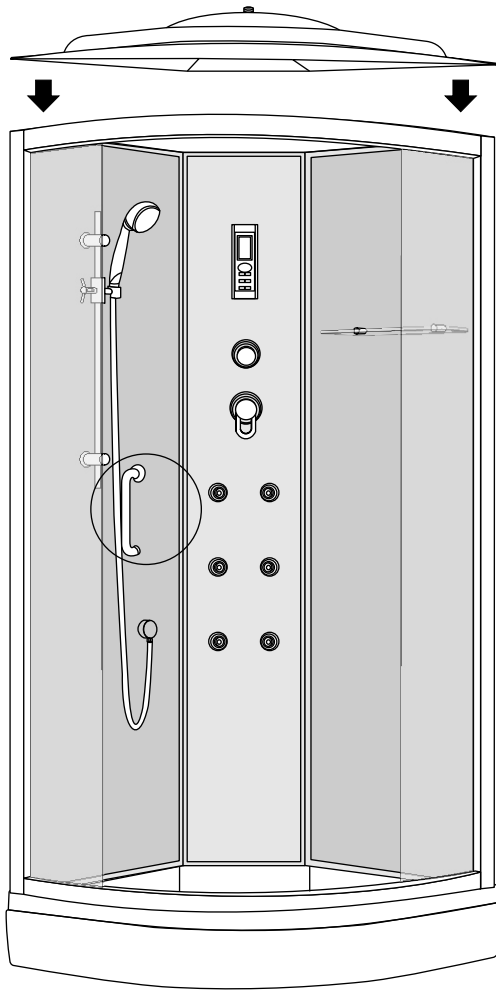







# 8430/8431 Installation Instructions

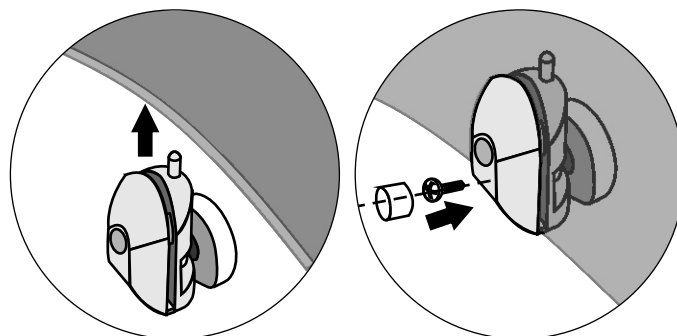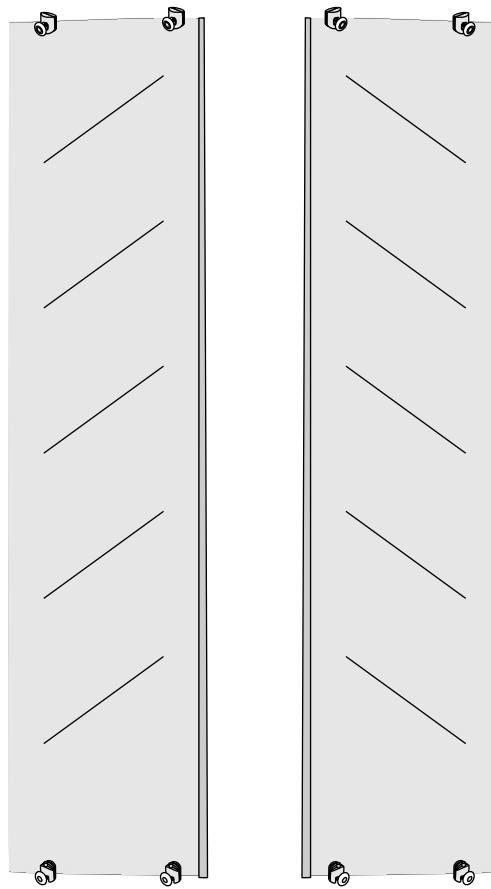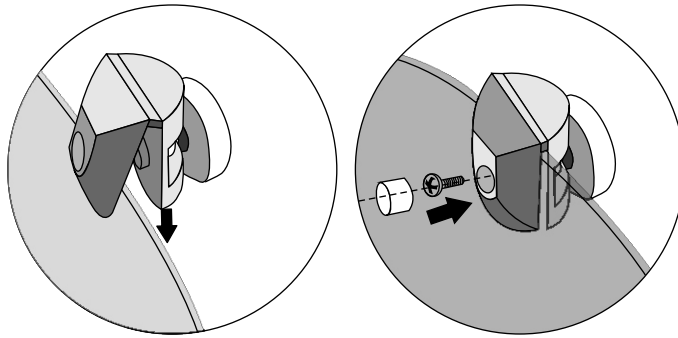

# 8430/8431

## Installation Instructions

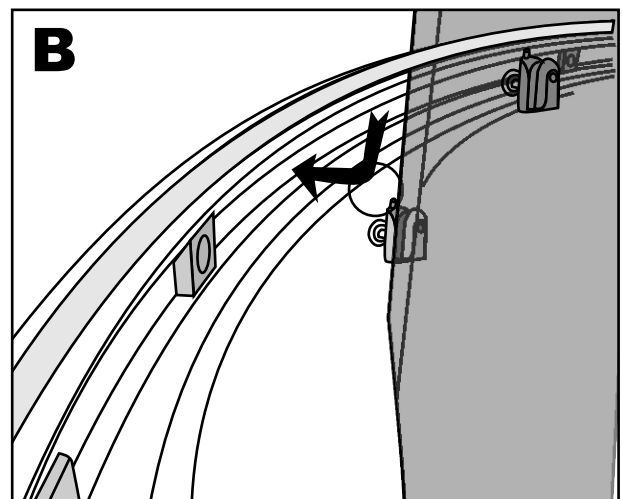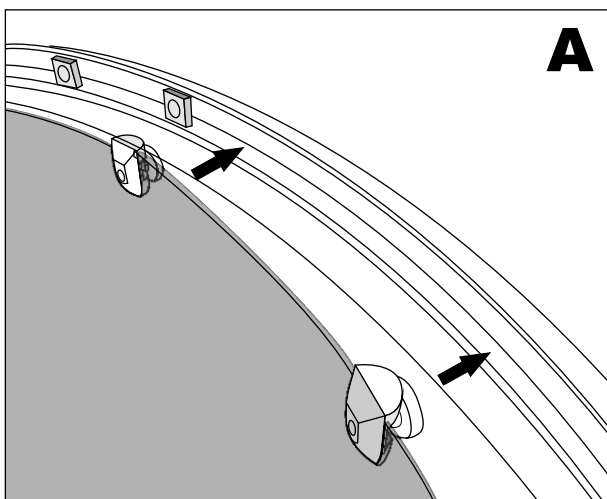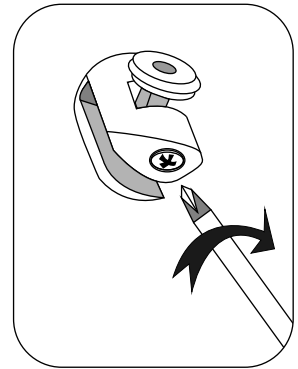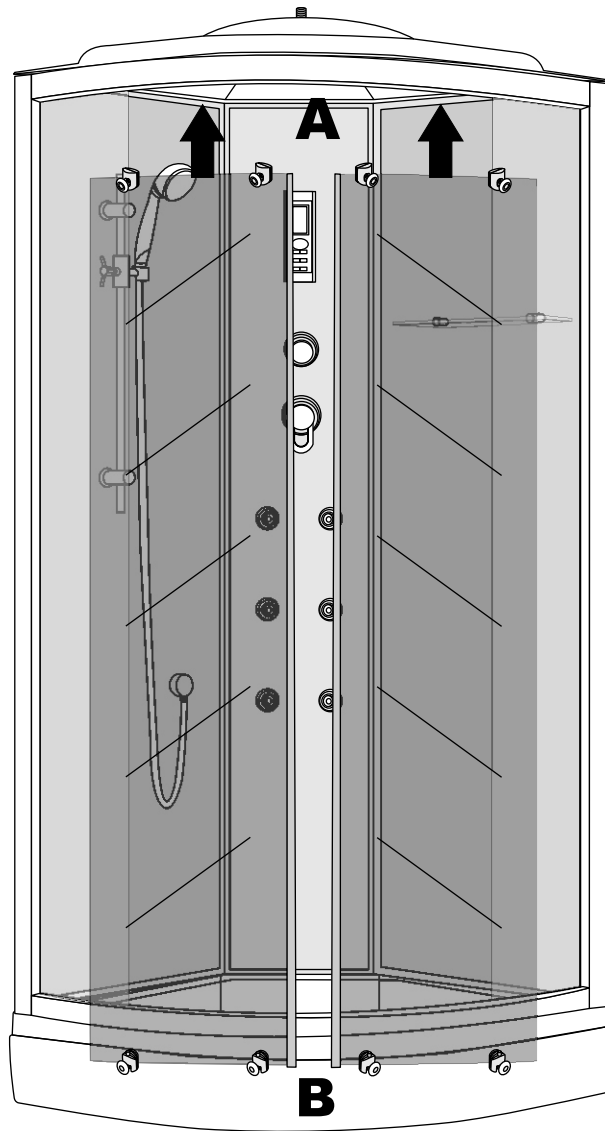

The diagram shows a corner shower enclosure with various components and assembly steps highlighted by callouts:

- Top Callouts:**
  - Assembly of the top hinge mechanism using a bolt, washer, and nut.
  - Installation of the top hinge bracket onto the shower frame.
  - Assembly of the top hinge mechanism using a bolt, washer, and nut.
- Side Callouts:**
  - Installation of the side hinge bracket onto the shower frame.
  - Assembly of the side hinge mechanism using a bolt, washer, and nut.
- Door Callouts:**
  - Installation of the door handle onto the shower door.
  - Assembly of the door handle mechanism using a bolt, washer, and nut.
- Bottom Callouts:**
  - Assembly of the bottom hinge mechanism using a bolt, washer, and nut.
  - Installation of the bottom hinge bracket onto the shower frame.
  - Assembly of the bottom hinge mechanism using a bolt, washer, and nut.

11